

nedis

ANOR5003BK700

DIGITAL OMNI DIRECTION INDOOR / OUTDOOR TV ANTENNA

Amplified version



Included in Package:


Before start your installation, please check the contents.

1. Antenna main unit
2. Waterproof cap
3. Outdoor mounting accessories
4. Indoor stand
5. Power supply kits



Mounting the antenna:


(Fig.1) Use the screws to fix the antenna on the pole.

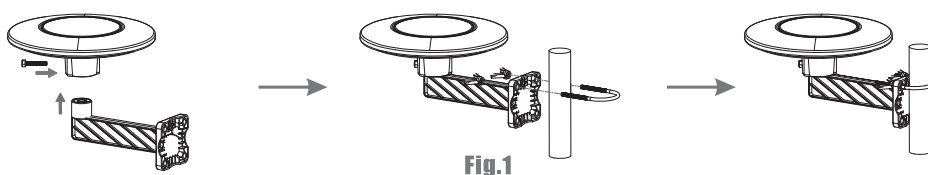



(Fig.2) Use the standing supporter accessory to keep antenna standing on the table for indoor use.



(Fig.3) connect the "F" male connector of the coaxial cable to the "F" female connector of the antenna, and wear the waterproof cap to the end of the connected "F" connector.

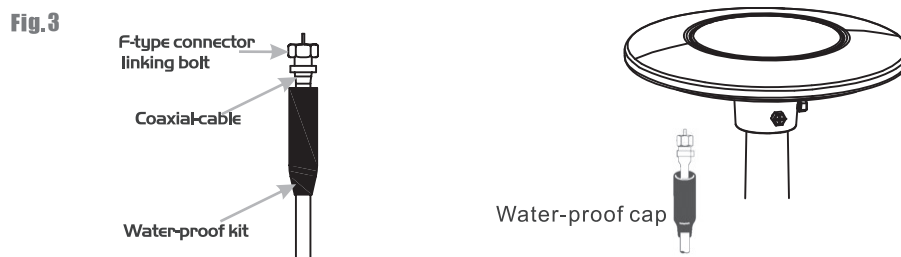

Installation: Please take following (Fig.4) and (Fig.5) installation instruction for reference.

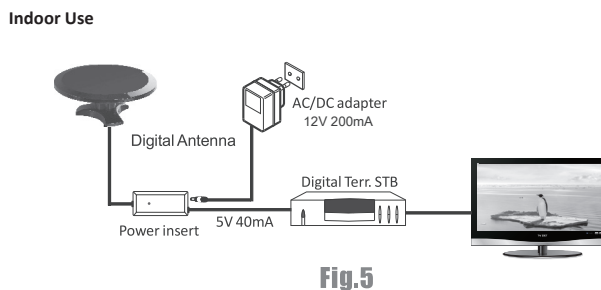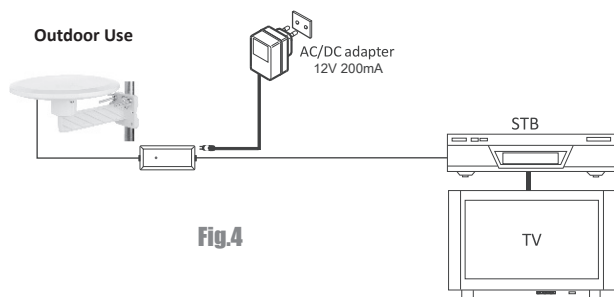


Powered via separate AC/DC adapter

Note: After the antenna mounting and installation is finished, please adjust the antenna in the best position that can get clear TV picture, then fix the antenna, organize the coaxial cable for neat, tidy and safety,

Operation Instruction:

Note: For the best reception, please check the following conditions

1. Keep the antenna away from the sources of interference: keep the antenna away from those big power consumption devices, such as air conditioner, elevator, hair dryer and microwave oven...etc.
2. Place the antenna near windows when use the antenna in indoor environment.
3. Install the antenna as high as possible: in digital terrestrial reception, if there are some interceptions between antenna and transmission tower, it will cause the signal loss temporarily. So if the antenna is installed as high as possible, those interceptions will be reduced.

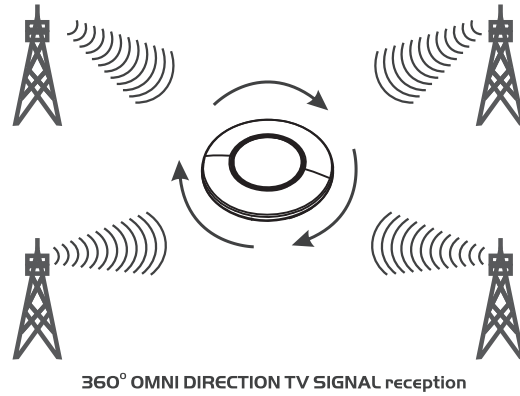

Contact

NEDIS B.V., De Tweeling 28, 5215 MC 's-Hertogenbosch, The Netherlands