

Scanmarker User Manual

•	GETTING STARTED.....	4
	INSTALLING YOUR SCANNER AND SOFTWARE	4
	<i>Installing the Software.....</i>	4
	<i>Activation.....</i>	5
	<i>Connecting Your Scanmarker.....</i>	5
	BASIC SETUP WIZARD.....	6
	HELP AND SUPPORT	6
•	INTRODUCTION	7
	GETTING FAMILIAR WITH THE SCANNER.....	7
	HOW DO I SCAN?	7
	SCANNING CORRECTIONS	9
	CHANGING MODES.....	9
	PRODUCT SPECIFICATIONS	10
	SYSTEM REQUIREMENTS	10
•	SCANMARKER SOFTWARE	11
	SCAN AS TEXT MODE.....	11
	SCAN TEXT AS IMAGE MODE.....	12
	TEXT'S IMAGE COLLECTOR	12
	<i>Save the currently edited scroll</i>	12
	<i>Print the current collection.....</i>	12
	<i>Load a scroll from file on your disk.....</i>	12
	<i>Copy current image to file.....</i>	12
	<i>Insert image from file, before the selected image.....</i>	13
	<i>Copy the selected image to the clipboard.....</i>	13
	<i>Cut the selected image to the clipboard.....</i>	13
	<i>Paste an image from the clipboard into scroll</i>	13
	<i>Move selected image one up or one down.....</i>	13
	<i>Delete the selected image</i>	13
	<i>Zoom in.....</i>	13
	<i>Zoom out.....</i>	13
	<i>Zoom display to 100%:.....</i>	13
	<i>Preview.....</i>	14
	THESAURUS	14
	LANGUAGE SELECTION	15
	TRANSLATE TO:	15
	DICTIONARY	15
	SEPARATOR.....	15
	SAY OUT LOUD.....	16
	VIDEO TUTORIAL	16
	SETTING OPTIONS	17
	<i>Scanning methods.....</i>	17
	<i>After scanning.....</i>	17
	<i>Printing (for the Image Collector).....</i>	18
	<i>Startup options.....</i>	18

●	APPENDICES	20
	TRUBLE-SHOOTING	20
	1. <i>Q: How do I know if Scanmarker software was installed successfully?</i>	20
	2. <i>Q: Scanmarker indicates it is not licensed. What should I do?</i>	20
	3. <i>Q: Scanmarker will not scan to an application. What should I do?</i>	20
	4. <i>Q: What are the jagged red underlines under some of the scanned words?</i>	20
	5. <i>Q: When I scan an email address, it doesn't open a new email message with the scanned address.</i>	21
	6. <i>Q: When I scan a URL/web address, it doesn't open my browser with the web address I scanned.</i>	21
	7. <i>Q: When I scan a sentence Scanmarker shows numbers and symbols instead of what was actually scanned.....</i>	21
	8. <i>Q: When scanning, certain unwanted characters appear which don't appear in the original sentence. What should I do?</i>	21
	9. <i>Q: I scanned a whole sentence using the "Thesaurus" feature. Why doesn't Scanmarker provide synonyms for each scanned word?</i>	21
	10. <i>Q: How do I configure Scanmarker to scan text and say it out loud at the same time?</i>	22
	11. <i>Q: Does Scanmarker support left-handed users?</i>	22
	CUSTOMER SUPPORT	22
	COPYRIGHT	23
	RECOGNIZED LANGUAGES	23
	<i>Languages with dictionary support:</i>	23

• Getting Started

This manual describes how to use your Scanmarker and its accompanying software application.

In this section you will learn how to install your Scanmarker Software onto your computer, how to access technical support and how to register your product.

Installing Your Scanner and Software

Congratulations on purchasing your Scanmarker! Your package includes the following:

- ❖ **Scanmarker Pen Scanner** — A handheld device for capturing text, numerical data and handwriting.
- ❖ **Scanmarker Software** — A CD that includes the installation software, Scanmarker software, tutorial video, and PDF version of this User Guide.
- ❖ **Warranty Card**
- ❖ **Quick Reference Guide** (printed copy)
- ❖ **User Manual**

Installing the Software

Note: Please make sure you install Scanmarker software prior to connecting your Scanmarker device to your computer!

- ❖ Insert the Scanmarker installation disc into your computer's CD-drive.
- ❖ If the setup window does not load automatically, run "Setup.exe" from your CD-drive.
- ❖ Click "Next" at each step to proceed with the installation and approve the end-user license agreement. Then select the installation path on your computer and finally click "Install" to begin the installation.
- ❖ To activate your Scanmarker software, enter the activation code that appears on your Scanmarker installation CD. You may choose to activate your scanner by email or via the Internet. If you prefer to activate via email, select "Activate Scanmarker via Email" and follow the instructions shown. For activation via the Internet make sure you are connected to the Internet and click "Activate Scanmarker via the Internet". We recommend activating your Scanmarker via the Internet as it is quicker and easier.
- ❖ Finally, select "Launch Scanmarker" and click "Finish" to complete the installation.

Activation

During the installation process you will be asked to activate your Scanmarker using the activation code that appears on your Scanmarker package.

The Scanmarker activation process can be performed either by email or over the Internet. If you choose to activate Scanmarker by email, follow the instructions that appear when choosing this option. If you choose to activate Scanmarker via the Internet, you will require an internet connection to communicate your Scanmarker's serial number and your computer's network card number to the Scanmarker servers. No personal, identifying or otherwise sensitive information from your computer is sent.

Please note:

- ❖ The license key is printed on the cover of your Scanmarker installation CD.
- ❖ The license key is case sensitive and requires that you enter any hyphens that appear in the code.

You may provide your contact details during the installation. Doing so will improve further assistance if required and allow us to update you when updates are available.

If you have difficulty registering your product, please contact Topscan support via email at support@scanmarker.com.

In case you had not, for some reason, completed the activation process during the software installation, please do it afterward by using the “Activate Scanmarker” option under Topscan's menu in the program files. “Start menu” -> “All Programs” -> “Topscan program group” -> Scanmarker program.

Connecting Your Scanmarker

Once you've completed the software installation, connect Scanmarker to an available USB port on your computer.

Basic Setup Wizard

Once activation is complete, Scanmarker's Basic Setup window will appear. You will be asked to select your scanning preferences. Once complete, your Scanmarker device should be ready to use.

The setup wizard contains two tabs: The "Language" and "Direction" tabs. The "Language" tab requires you to pick the language of the texts you wish to scan. Choosing a language that does not match the scanned texts may result in illegible scans.

Next, pick the direction you wish to scan. You can scan either from left-to-right or right-to-left. Right-handed users generally scan texts from left-to-right while left-handed users generally scan texts from right-to-left.

You can further adjust Scanmarker's preferences after completing the setup wizard via Scanmarker's "Settings" menu.

By default, your Scanmarker is setup to scan text and numbers. Use Scanmarker's menu to change the scan Mode to "Text as Image" to capture and save your scans as images.

To load Scanmarker each time your computer starts, check the option to "automatically start on Windows startup".

To start using Scanmarker, double-click the Scanmarker icon on your desktop.

Scanmarker allows you to scan printed text directly into any Microsoft Office application or other word processing or text editing applications such as Word, Excel, Notepad, or even email messages and web browsers.

The Scanmarker icon will appear on the bottom right-hand-corner of your screen. Click the icon to access Scanmarker's settings menu.

Help and Support

After registering your licensed copy of Scanmarker you will be eligible for product support at support@scanmarker.com.

● Introduction

Scanmarker is a compact, pen-shaped, handheld scanner that combines affordable hardware with innovative scanning software for your PC.

With Scanmarker, you can scan complete sentences and words from printed material and transfer or translate them automatically to any text-editing program such as Microsoft Word, Notepad or even directly into your email messages. Scanning with Scanmarker is easier than highlighting text using an ordinary yellow highlighter.


Scanning with Scanmarker saves you vast amounts of time compared with traditional note-taking.

Scanmarker's software also provides additional features such as image scanning, text to speech, and thesaurus.

Scanmarker offers:

- ❖ Extreme accuracy with very little practice. Scanmarker is effective and easy for everyone to use.
- ❖ Built-in software tools that enhance your scanning experience.

Getting Familiar with the Scanner

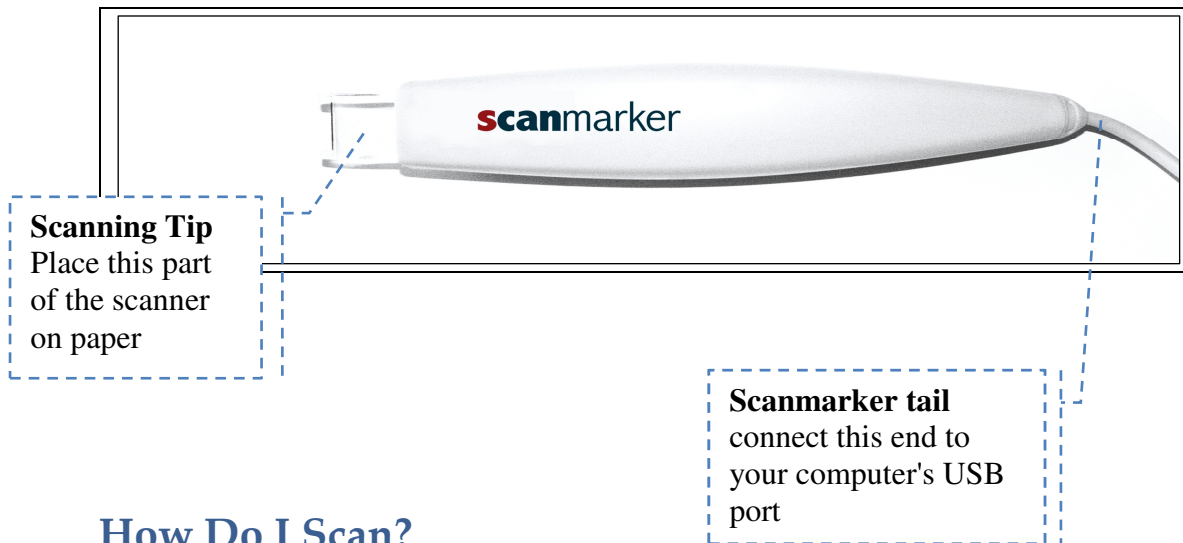

How Do I Scan?

Scanmarker was designed to make your scanning experience as easy as possible. Just follow the steps below.

1. Hold your Scanmarker device at an angle, just as you would a pen or highlighter. Place its two clear tips just before the text you wish to scan.
2. Ensure that the line you wish to scan is positioned in the middle, between the two sharp tips of your Scanmarker.
3. Gently press the Scanmarker against the page until you hear a clicking sound and a light is emitted from the Scanmarker tip. Then, slide the scanner smoothly and fluidly across the line you want to scan.

Tips for proper scanning:

- Avoid scanning too slowly; use quick and fluid gestures.
- Avoid pressing too hard on the page. Use gentle pressure when sliding your scanner across the page.
- Lift your Scanmarker off the page when you reach the end of the sentence.
- Scan only one line at a time; avoid crossing over to another line while scanning.
- Avoid gripping your Scanmarker too firmly.
- Avoid twisting the scanner.

Simply click and slide!

Note: Practice makes perfect! It may take a few tries before you become completely comfortable with Scanmarker. We encourage you to experiment with various techniques, speeds, and types of text.

For example, try scanning at different speeds until you feel comfortable with your Scanmarker and you have achieved the result that you want.

There is no single best way to hold your Scanmarker..Scanmarker is capable of scanning at almost any angle, from nearly crouching over the page to nearly standing tall (90°).

Scanning corrections

Scanmarker will often recognize if your scan was not been performed correctly, and will advise you on how to improve your scanning technique. These error messages will appear as short animations in the middle of your screen after each incorrect scan.

You may choose to set the warnings to appear either as "info balloons" in the bottom right-hand-corner of your screen or with descriptive animations.

To set scanning corrections options, select Settings from the menu, then select Scanning Method TAB, below "scan error notifications", you may check or uncheck the checkbox that says: "Display scanning errors and corrections".

If you would like to receive scanning corrections check it and choose either:

- Show corrected scanning techniques with descriptive animations or
- Show corrected scanning techniques as info balloons.

This way you configure Scanmarker to teach you the best way of scanning.

There are three common types of scanning errors:

1. Your scan was too slow. For better results, try scanning slightly faster in one fluid motion.
2. Your scan was not fluid. For better results, slide the scanner in one fluid motion while applying minimal pressure.
3. Your scan went out of line. For better results, please keep the scanned line between the two sharp ends of the clear tip.

Changing Modes

Whenever you change a mode in Scanmarker you should be able to see the changed mode with a check sign on the left side of it. Also, a balloon should popup from Scanmarker icon describing the change you have just made.

For example, if you changed the mode to "Scan as Text" a check sign will appear next to it , and a popup balloon from Scanmarker icon that says:

Scanmarker

Scan Mode : Scan as text

Product Specifications

Recognition Speed	3000 characters per minute
Sensor	Linear CMOS 128 pixels
Optical Resolution	350 DPI
Scanning Rate	Up to 20 cm/sec
Character Size	6 to 24 points
Weight	65 Grams

System Requirements

- 128MB RAM
- 180MB of free hard disk space for all languages versions
- Internet connection or a fax machine for first-time product activation
- Windows XP, Vista or Windows 7.
- USB 1.1-2.0

• Scanmarker Software

To open the Scanmarker application, either double-click the Scanmarker icon on your desktop or choose Scanmarker from your program files (Do the following steps :

“Start menu” -> “All Programs” -> “Topscan program group” -> Scanmarker program).

A small Scanmarker icon will appear in the Windows system tray (on the bottom right-hand-corner of the screen) indicating that Scanmarker application is running in the background.

Click the Scanmarker icon on the taskbar to view the application's settings menu.

Scanmarker offers two primary scan Modes: “Scan as text” mode, which is selected by default and transfers printed texts to an application that uses editable texts, and “Text as Image” mode, which allows you to capture text as images. “Text as Image” mode is useful for scanning non-Latin characters, unique text-types, and handwriting.

The **“Image Collector”** allows you to scan any language as images into Scanmarker's own editor, store them in a single place and access them at a later stage. You can use the “Image Collector” utility as an alternative to other applications such as Microsoft Word or PowerPoint or other programs that support displaying images.

Scan as text mode

Scanmarker lets you scan lines of text into any application that is text editable. To scan text into an application such as Microsoft Word, simply open the application and start scanning. To use Scanmarker with multiple applications, you can toggle between the applications by clicking their respective icons on the taskbar. Please make sure the cursor is placed at the right place on the application you are scanning to.

When Scanmarker loads, the “Scan as text” scanning mode is selected by default.

Scan Text as Image mode

To switch from "Scan as text" mode to the "Text as Image" mode , simply select "Scan Mode" on Scanmarker's settings menu and then select "Text as Image" mode. You can now scan texts as images into any application that supports the display of images. The line of text you scan as image will appear straightened on the application you scan to.

Using this mode Scanmarker will always scan to where the cursor is placed on the application.

Text's Image Collector

Scanmarker's "Image Collector" is a useful utility for collecting and organizing texts that are scanned and saved as images. Using the Image Collector is especially useful for scanning different languages and handwriting.

To access the "Image Collector" utility, select "Image Collector" option after clicking Scanmarker's icon.

Now you can start scanning lines of text, or images.

After your images are scanned and collected, an index number will appear next to each image indicating the order in which it was scanned. The image size is indicated in pixels next to the index number. Scanmarker allows you to determine the "Minimal Image Size" in pixels from the "Settings" menu to manage the minimum dimensions of each image.

After scanning the images into the "Image Collector", you can use any of the following functions to organize and edit your collection of scanned images.


- ✓ **Save the currently edited scroll:** Allows you to save the currently-edited collection. The file will be saved to your hard disk as an image collection file. You can select "Save As" from the "Image Collector" toolbar and select a name for the scroll you are saving. .
- ✓ **Print the current collection:** Allows you to print the entire content of the image collection. Printer settings are available via the "Settings" menu. To change the printer settings, (i.e., page setup, paper quality, print speed and quality, and print layout) click the "Properties" button then click OK to print your document. If the printer does not print your document correctly please check your printer settings or update your printer's drivers. Be aware to the vertical line appearing on the screen is there to mark the margins of an A4 page. The level of zoom that you choose should adjust the size of the image for the page size.
- ✓ **Load a scroll from file on your disk:** Inserts another collection into the active one. Images are inserted before the selected image. Simply choose the file you would like to insert into current scroll you are working on.
- ✓ **Copy current image to file:** Copies the selected image to an external file. Select the image you want to copy and then select the "Copy Current Image to

File" icon on the toolbar. You can also right-click the image and select "Copy Image to File". Enter a file name and click "Save". The file will be saved as a bitmap (.BMP) file.

- ✓ **Insert image from file, before the selected image:** Inserts an image from an external file. Select an image and then click "Paste Image from File" icon from the toolbar. You can also right-click the image and select "Paste an image file here". The image file will be inserted before the selected image.
- ✓ **Copy the selected image to the clipboard:** Your image will be copied to the clipboard for later use. Select the image and then click "Copy Image" icon on the toolbar or right-click and choose the option from the drop-down menu.
- ✓ **Cut the selected image to the clipboard:** Your image will be erased from the collection and copied to the clipboard for later use. Select the image and choose the "Cut Image" icon from the toolbar or right-click the image and choose "Cut Image" from the drop-down menu.
- ✓ **Paste an image from the clipboard into scroll:** The image that is stored on the clipboard will be pasted below the selected image(right after the selected image). First, select the image under which the clipboard image should be pasted. Then select the "Paste Image" icon from the toolbar or right-click the image and select "Paste Image" from the dropdown menu. The image can be inserted multiple times throughout the document.
- ✓ **Move selected image one up or one down:** To move the selected image one up or one down, first select the image you want to move then click the up arrow or the down arrow icons from the toolbar. The image will be move to the location of your choice.
- ✓ **Delete the selected image:** To delete an image, first mark the image you wish to delete and click the "Delete Image" button from the toolbar.
- ✓ **Zoom in:** Magnifies the image display in increments of 25%. The zoom-in button is located on the right- or left-hand side of the application window (depending upon the selected alignment). You can also control the zoom using the zoom throttle located on the side of the application window. Before printing, pay attention to the vertical lines, which mark the margins of the A4 page.
- ✓ **Zoom out:** Shrinks the image display in increments of 25%. The zoom-out button is located on the right- or left-hand side of the application window (depending upon the selected alignment).
- ✓ **Zoom display to 100%:** magnifies the image display to 100%. You can select this option from the toolbar on the left- or right-hand side of the application window (depending on the selected alignment).

Preview

While using the “Image Collector” you can view the preview panel. The Preview panel is your immediate feedback: did the scan capture the entire line of interest?

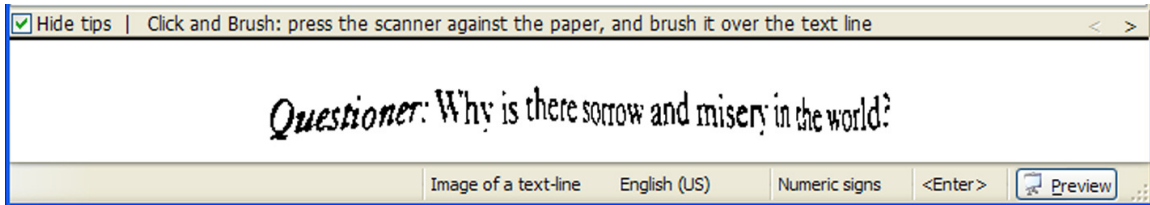

An example of the preview panel

Use the Preview panel to get familiar with your pen: you get to see what the scanner actually read, and you can immediately see how steady and straight your line of interest was captured. After scanning on each and every mode you can always change to the “Image Collector” and see on the preview what your scanner actually read.

Thesaurus


Scan to get Thesaurus mode helps finding different words with an identical meaning.

The word you scanned would be checked for identical meanings and contexts.

The Thesaurus mode finds alternative suggestions to the scanned word and replaces your word with a suggestion you choose.

To access the Thesaurus, simply click "Thesaurus" from the menu. To look-up a word using the Thesaurus feature first scan the word you wish to look-up.

For best results **start scanning well before the word begins**. If the word is in the middle of the sentence, consider positioning the scanner over the preceding word.

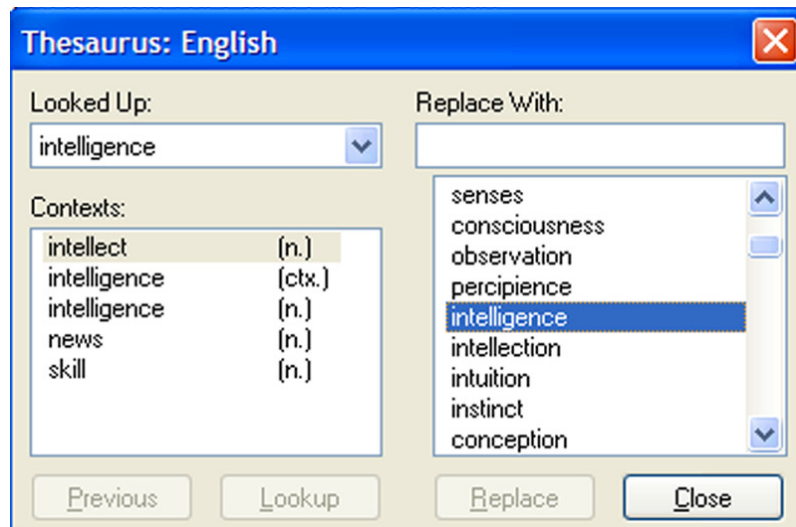

An example of the Thesaurus popup Window with identical meanings to the word you scanned

Then slide the Scanmarker quickly and fluidly across the desired word. Scanmarker should be able to identify the intended word even if you partially scanned the next word in the sentence.

In case you scanned a whole line, Scanmarker will pick up the longest word for Thesaurus.

Language Selection

With Scanmarker you can scan in almost all European languages! To select a language other than English, choose the desired language from the "Languages" menu. After scanning, the selected language will be recognized by Scanmarker and converted to text directly into the active application.

Please choose the correct language corresponding to the scanned text, to ensure that your texts are scanned correctly.

Translate to:

Scanmarker allows you to translate text from one language to another. Simply, select the language to which you want to translate the scanned text to.

Here you have 2 options to choose from for your translation:

1. Translate Text.
2. One word at a time.

Scan and the line of text or the single word will be translated accordingly. If you need more languages to choose from click "more..." and a settings popup window will open up with choices for more words.

Dictionary

Scanmarker allows you to view a dictionary definition, or value of the word you have scanned. Scan a single word and Scanmarker will elaborate on the meaning of that word.

Separator

Scanmarker's Separator feature allows you to select a keystroke to be inserted after each scan. You can choose to separate scans with a space, enter, tab or backspace.

- ❖ **(No key)** — Enters the scanned sentence into the current application without adding a keystroke.
- ❖ **<Space>** — Adds a space at the end of the scanned text.
- ❖ **<Enter>** — Adds a line break at end of the scanned text.
Note: <Enter> may not be supported by all applications. If you experience difficulties with this, please use another separator instead, such as <Space>.

- ❖ **<Tab>** — Adds a tab at the end of the scanned text.
Note: <Tab> may not be supported by all applications. If you experience difficulties with this, please use another separator instead, such as <Space>.
- ❖ **<Backspace>** — Adds a backspace at the end of the scanned text.
Note: <Backspace> may not be supported by all applications. If you experience difficulties with this, please use another separator instead, such as <Space>.

Say Out Loud

Also referred to as text-to-speech, this feature enables Scanmarker to pronounce the scanned text in an audible voice.

You can activate the read-out-loud feature by selecting "Say Out Loud" from the main menu. The "Rate of Speech" option adjusts the speech speed while "Volume" adjusts the loudness. The current version of Scanmarker supports say-out-loud for English-language texts only.

From the icon menu you can adjust the volume of speech either to:

High, Medium or low.

You can also adjust the rate of speech (how fast it sounds) either to:

Fast, Medium or slow.

You can also find more advanced settings for this feature in the "Settings" window under "After scanning" tab..

Note: Please ensure that your audio system is properly installed, your speakers are connected to your computer, and the volume is set to an appropriate level.

Video Tutorial

The Video Tutorial activates a short video tutorial to assist you in mastering your Scanmarker scanning technique. The video covers a wide range of aspects related to scanning techniques including proper grip and slide motions as well as suggestions for common scanning errors to avoid. The video tutorial appears when you first install Scanmarker, or when you choose to watch it from Scanmarker's menu.

Setting Options

Scanmarker's Settings Menu allows you to optimize Scanmarker's settings and behavior. To make Scanmarker easier for you to use, some of the features and functions mentioned before are also available in the icon's menu. You can find Settings on the menu by clicking the Scanmarker icon. A dialog window with the following tabs will appear:

- **Scanning Method** – Settings and options for the scanning method.
- **After Scanning** – Settings and options for manipulating the scanned text after scanning.
- **Printing** – Settings and options for defining headers and footers.
- **Startup** – Settings for Scanmarker's start-up.

Each of these tabs contains the following sections:

Scanning methods

- **Scanning direction:** Defines the direction of the scan:
 - **Right-handed:** Scan left-to-right for right-handed users.
 - **Left-handed:** Scan right-to-left, for left-handed users.
- **Scan error notifications**
 - **Show corrected scanning techniques with descriptive animations**
 - **Show corrected scanning techniques as info balloons**
- **Enhance OCR accuracy:** Triples the OCR effort to get the text correctly hence prolongs processing time

After scanning

- **Read out loud:** Scanned texts will be scanned *and* spoken out loud. This feature functions best with English texts. Non-English texts based on the Latin character set will be pronounced phonetically but the pronunciation may not be accurate.
 - **On/off:** Turns this function on or off.
 - **Volume (0 to 100):** Determines the speech volume
 - **Speech rate (-10 to 10):** Determines the speech rate

- **While scanning texts**

- **Recognize email addresses and open a new email message:** If you mark this checkbox, it will automatically launch an email message whenever you scan an email address. The email address will be filled in the **send to** field. Complete the rest of the details of the email and send it.

- **Recognize URL and open in your default browser:** If you mark this checkbox, it will automatically launch your default web browser when an URL address is scanned. The browser will be opened with the URL address you scanned.

- **When pasting an image**

- **Auto-crop:** When pasting images, this feature removes extra white-spaces above and below the scanned image.

- **Designate minimal image length:** When scanning using the “Text to Image” mode, you can determine the minimal image length in pixels. This is useful for keeping the font-size small when scanning short sentences.

✿ **Printing (for the Image Collector)**

- **Header:** Edit the header prior to printing from the Image Collector.

- **Footer:** Edit the footer prior to printing from the Image Collector.

✿ **Startup options**

- **Automatically start Scanmarker when logging in:** Go to the settings menu and check, If this option is enabled, Windows will automatically start Scanmarker when it starts-up.

- **Show settings wizard on next run:** Opens the Settings Wizard each time you start Scanmarker. Using the Settings Wizard you can choose:

1. To automatically start Scanmarker on windows startup.
2. To Set up the language you are currently scanning.
3. To Choose whether you wish to scan from right to left or from left to right

- **Show splash screen on startup:** Briefly show a welcome screen on startup.

- **Interface language:** Currently, English is the only language available for Scanmarker's interface.

- **Scan language:** Choose the language of scanning.
- **Translation language:** If you wish your scan results will be translated to a different language, please choose which one from the languages available for Translation.

Ending the settings session

To accept any changes made to Scanmarker's settings click "Save".

To abandon any changes made to Scanmarker's settings click "Cancel".

• Appendices

Trouble-shooting

1. Q: How do I know if Scanmarker software was installed successfully?

A: To check whether Scanmarker software was installed correctly, ensure that both Scanmarker's driver and application were properly installed by following these directions:

To ensure that your device driver installed properly:

Make sure that your Scanmarker device is connected to an available USB slot in your computer. Then click "Start" → "Control Panel" → "System". Under the "System Properties" menu click "Hardware" and then click "Device Manager". Select "Universal Serial Bus Controllers". If Scanmarker installed correctly, "Scanmarker 1.30" will appear under "Universal Serial Bus Controllers".

To ensure that your Scanmarker software was installed properly:

Check to see whether Scanmarker's application icon was placed on your desktop on the bottom right corner of the screen. If you are unable to find the icon on your desktop, click "Start" → "Programs" (or "All Programs", depending on your operating system). If Scanmarker was properly installed, you should see a program group named "Topscan". If you do not see this program group, make sure that no groups are hidden by clicking the down- or up-arrows to expand the program list.

2. Q: Scanmarker indicates it is not licensed. What should I do?

A: Run the activation wizard found under "All Programs" → "Topscan" group of files.

3. Q: Scanmarker will not scan to an application. What should I do?

A: Under Scanmarker's settings menu check that the "Scan as Text" mode is selected. Then, make sure that the cursor is placed in a visible portion of the application and that the application is in focus, meaning, that it is running in the foreground.

Also, check to ensure that you are following Scanmarker's scanning guidelines. Scanmarker will only recognize a line that was correctly scanned between the two sharp tips of your Scanmarker device.

4. Q: What are the jagged red underlines under some of the scanned words?

A: In most applications, jagged red underlines indicate that your editing program did not recognize the spelling of the word and has marked it as a misspelled word.. To correct any misspellings, right-click the underlined word to see spelling alternatives. Then you can choose one of the alternative suggestions for that word and replace it.

For further help with spelling, please consult the help resources in the application into which you are scanning.

5. Q: When I scan an email address, it doesn't open a new email message with the scanned address.

A: First, check that the “Recognize Email Address and open a new email message” options under Scanmarker’s settings menu is selected. If an email message doesn’t appear once you scan an email address, check that you have a default email program defined on your computer. Scanmarker recognizes Outlook, Outlook Express, Thunderbird, Eudora and other common email applications. Scanmarker will create a new email message with the scanned address set as the recipient.

6. Q: When I scan a URL/web address, it doesn't open my browser with the web address I scanned.

A: First, check that the “Recognize HTTP:// web addresses and open in your browser” is checked in Scanmarker’s settings menu.

Secondly, check that a default browser is defined in your computer’s operating system. Scanmarker recognizes Internet Explorer, Chrome, FireFox, Opera and other common browsers.

The result of checking this check box and scanning a URL address should open your default browser with the URL address you scanned.

7. Q: When I scan a sentence Scanmarker shows numbers and symbols instead of what was actually scanned.

A: Please ensure that the “Scan as Text” scan mode is selected. Then ensure that the option to “Scan only numbers and financial data” is not checked and that you have selected the appropriate scanning language.

8. Q: When scanning, certain unwanted characters appear which don't appear in the original sentence. What should I do?

A: Scan slightly faster and avoid applying excessive pressure on the scanner. Scanmarker operates optimally when moving the device quickly and fluidly in a sliding motion across the paper. The movement should be similar to the movement you make when using a yellow highlighter. If you scan too slowly or press the scanner too firmly against the paper, Scanmarker may interpret letters as appearing too wide. If you scan too quickly the device might stray away from your intended line of interest.

The typical amount of time it should take to scan a single line of text on a standard A4 document is about two seconds. Always ensure that the line you are scanning is placed directly in the middle, between the two sharp tips of the Scanmarker device.

Scanmarker is capable of scanning at almost any angle, from nearly crouching over the page to nearly standing tall (90°).

For more recommendations on proper scanning techniques, please refer to the “Scanning Techniques” section in this user guide.

9. Q: I scanned a whole sentence using the "Thesaurus" feature. Why doesn't Scanmarker provide synonyms for each scanned word?

A: Scanmarker’s Thesaurus feature suggests synonyms for single-word scans only. If you scan multiple words while this feature is active, Scanmarker will suggest synonyms

for the longest word in the scanned text. For best results, start scanning at the end of the previous word to ensure that the desired word is captured in full. Also, sweep the scanner beyond the end of the desired word to ensure a fast and fluid motion across the desired word.

10. Q: How do I configure Scanmarker to scan text and say it out loud at the same time?

A: First, check that you either selected “Say it Loud” button on the menu. Or checked “Read out loud” checkbox in Scanmarker’s settings menu. You should then see a check sign next to it. Then ensure that the “Scan as text” mode is selected as the scan mode. Finally, check that your computer’s volume control is properly adjusted.

11. Q: Does Scanmarker support left-handed users?

A: Yes, it is possible to scan either from left-to-right or from right-to-left. You can choose your preferred scanning direction from Scanmarker’s Settings menu.

Customer Support

- ❖ You can open this user manual when you select it from Scanmarker’s menu.
- ❖ Feel free to contact us at support@scanmarker.com

Copyright

Topsan Scanmarker includes the following software, licensed from its respective companies. All rights are reserved to the original manufacturer of each component.

Scanmarker™ is © copyright 2000-2010 by Topsan Ltd, All Rights Reserved.

Scanmarker™ includes libraries, functions and/or other licensed software from ABBYY Ukraine. ABBYY, FineReader, FineReader Engine, and FineReader SDK are commercial trademarks of ABBYY Software House.



ABBYY, ABBYY Logo, FineReader, FormReader, FlexiCapture are either registered trademarks or trademarks of ABBYY Software Ltd. Other product names mentioned herein may be trademarks and/or registered trademarks of their respective owners and are hereby recognized.

Scanmarker™ incorporates technology and/or engine and/or licensing code and/or software components from Macrovision Inc. FLEXNet, FLEXNet Publisher, FLEXIm, TRL, TRA are registered trademarks of Macrovision Corporation, all rights reserved to Macrovision Corporation. Macrovision, Globetrotter, FLEXIm, and FLEXnet are trademarks of Macrovision Corporation

Recognized Languages

Languages with dictionary support:

Dutch; English;; Finnish; French; German; Greek;; Italian; Latvian; Norwegian;; Russian; Spanish; Turkish; Ukrainian; Digits / Numbers.

Scanmarker also functions with common scanning languages like C++.