
HQ-TH12

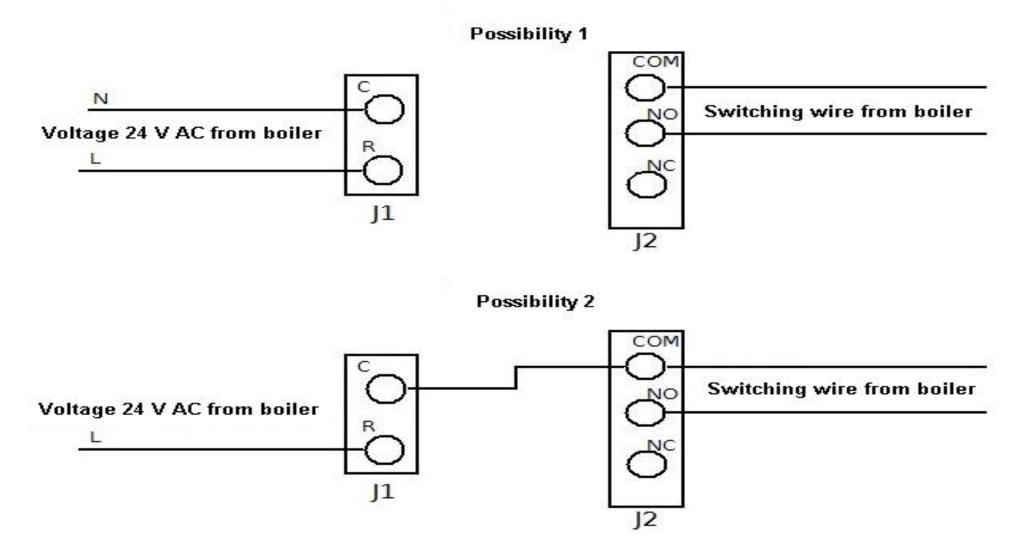

^{*} Always read your boilers manual to find out if one of these schemes is possible and to figure out which wire has to be transferred.