

**English - Description**

The ultrasonic humidifier is a device designed to increase the humidity in a single room. Ultrasonic humidifiers use high-frequency ultrasonic waves to convert water into vapor. The device releases the mist into the room, which almost instantly creates a cooler, more humid environment.

It is recommended to use the device in rooms with a temperature between 0 °C and 40 °C and a relative humidity lower than 90%.

1. Water tank	Remove the water tank from the device.
2. Water tank cover	Remove the water tank cover with water.
3. Nozzle	Put the water tank cover on the water tank. Make sure that the nozzle is correctly placed on the water tank cover.
4. On/off button	Press the on/off button.
5. Mist output button	Remove the water tank from the device.
6. Night mode button	Remove the water tank cover with water.
7. Baby mode button	Put the water tank cover on the water tank. Make sure that the nozzle is correctly placed on the water tank cover.
8. Plasma button	Press the plasma button.
9. UV button	Press the UV button.

Safety**General safety**

- Read the manual carefully before use. Keep the manual for future reference.
- The manufacturer is not liable for consequential damages or for damages to property or persons caused by non-compliance with the safety instructions and information.
- Do not use the device for other purposes than described in the manual.
- Do not use the device if any part is damaged or defective. If the device is damaged or defective, replace the device immediately.
- The device is suitable for indoor use only. Do not use the device outdoors.
- The device is suitable for domestic use only. Do not use the device for commercial purposes.
- Do not use the device near heating, cooling, or other vessels containing water.
- Do not use a timer or a separate remote-control system that switches the device automatically.
- Do not cover the device.
- Place the device on a stable, flat surface.
- Keep the device away from flammable objects.

Electrical safety

- To reduce risk of electric shock, this product should only be opened by an authorized technician when service is required.
- Disconnect the product from the mains and other equipment if a problem should occur.
- Do not damage the power cord or plug. If the power cord or plug is damaged or defective, it must be replaced by the manufacturer or an authorized repair agent.
- Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.
- Do not move the device by pulling the mains cable. Make sure that the mains cable cannot become entangled.
- Makes sure that the mains cable does not hang over the edge of a worktop and cannot be accidentally tripped over.
- Do not leave the device unattended while the mains plug is connected to the mains supply.
- Do not use an extension cable.

Cleaning and maintenance

- Before cleaning or maintenance, always switch off the device, remove the mains plug from the wall socket and wait until the device has cooled down.
- Do not use cleaning solvents or abrasives.
- Do not clean the inside of the device.
- Do not attempt to repair the device. If the device does not operate correctly, replace it with a new device.
- Do not immerse the device in water or other liquids.

Clean the outside of the device using a soft, damp cloth. Thoroughly dry the device with a clean, dry cloth.

Support

If you need further help or have comments or suggestions, please visit www.nedis.com/support.

Nederlands - Beschrijving

De ultrasone vochtinrichter is een apparaat voor het verhogen van de vochtigheid in één ruimte. Ultrasone bevochtigers maken gebruik van ultrasonische golven om water te splitsen in waterdamp. De waterdamp wordt vrijgegeven in de ruimte, waardoor er direct een koeler en vochtiger luchtvoel is.

Aanbevolen worden om het apparaat te gebruiken in ruimtes met een temperatuur lager dan 20 °C en een relatieve vochtigheid lager dan 80%. Het apparaat kan worden gebruikt in ruimtes met een temperatuur tussen 0 °C en 40 °C en een relatieve vochtigheid lager dan 90%.

1. Waterreservoir	Verwijder het waterreservoir uit het apparaat.
2. Kap van het waterreservoir	Verwijder de kap van het waterreservoir.
3. Mondstuk	Vul het reservoir met schoon water (max. 40 °C).
4. Aan-/uit-knop	Zet de kap van het waterreservoir op het waterreservoir. Controleer of de spuitmond correct is geplaatst.
5. Nevelafgiffeknop	Plaats de mondstuk in het reservoir.
6. Nachtmodusknop	Druk op de knop om de nachtmodus te openen. De indicator gaat branden.
7. Babymodusknop	Druk op de knop om de babymodus te openen. De indicator gaat branden.
8. Plasmaknop	Druk op de knop om de plasmafunctie te starten. De indicator gaat branden.
9. UV-knop	Druk op de knop om de UV-functie te starten. De indicator gaat branden.

Verwijder het waterreservoir bij water in het apparaat zodat weer gaan werken.

Verwijder de kap van het waterreservoir en de kap van het waterreservoir indien nodig met water.

Vul het reservoir met schoon water (max. 40 °C).

Zet de kap van het waterreservoir op het waterreservoir. Controleer of de spuitmond correct is geplaatst.

Opmerking: Als het waterreservoir te weinig water bevat, stoppt het apparaat automatisch.

Vul het waterreservoir bij met water in het apparaat zodat weer gaan werken.

Verwijder de kap van het waterreservoir.

