



CMP-FILMSCAN20



MANUAL (p. 2)
USB PHOTO SCANNER

Introduction

The König USB photo scanner is an easy to use solution to digitalize your photos without the need of a PC. The scanned photos can be stored on a SD card or on the internal memory of the scanner, after which they can be transferred to the computer by connecting the scanner to the computer.

Scanning photos

To scan photos, do not connect the scanner to a computer, but use the provided AC adapter instead. The scanner will be automatically switched on once the AC adapter is plugged into the power socket. Together with the scanner, three trays in different sizes are supplied. Please insert the photo you like to scan in the tray with the correct size (Picture 1). Make sure the photo is correctly in the tray, like on picture 2.



Picture 1



Picture 2

Open the slide on the top of the scanner now (picture 3) and insert the tray (picture 4).




Picture 3



Picture 4

Once the tray is inserted into the scanner, the photo will be displayed on the screen of the scanner (number 1 on picture 5). The photo can be stored on the internal memory or on a SD memory card (number 2 on picture 5). Once the SD card is put in to the card slot, the scanner will select the SD card automatically. To take out the SD card, push on the card and pull it out.

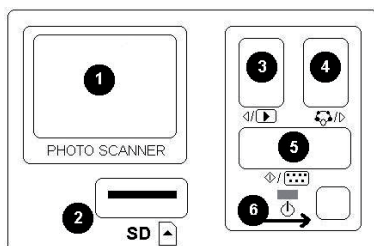

Picture 5

To scan the inserted photo, press button 5. The photo will be scanned within a couple of seconds now.

Photo playback

To check the saved photos press button 3. To go to the next or previous photo press button 4 or 3.

By pressing button 5, the playback menu with seven icons will appear on screen. (see picture 6).

1 + 2: Icons for manual slide and automatic slide show.


3: Delete current image

4: Delete all images

5: Turn image 90 degrees to the left

6: Turn image 90 degrees to the right

7: Exit this menu and go back to scan modus.

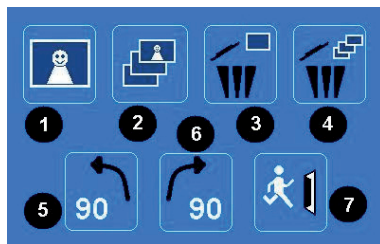

Picture 6

System menu

When button 4 on picture 5 is pressed while in scan mode, the system menu with four icons will appear on the screen. By pressing the buttons 3 or 4 there can be navigated to each functionality. Each icon's function is described below:



Exposure value - Press button 3 or 4 to select a value and confirm with button 5. In the EV mode the exposure settings can be manually changed to adjust the lighting. Especially with darker pictures we recommend to try and adjust this value. The results are directly visible on the screen.



TV out - To switch the TV output to NTSC or PAL. The TV output can be found on the back of the scanner beside the USB connector.



Format - To format the internal memory or SD card. Select V for formatting and X to exit the menu.



Back home - Select to exit the menu.

Copy the images to the computer

To copy the images to a computer, disconnect the scanner from the AC adapter and plug the USB cable into the computer. The computer will recognize the scanner automatically, except for Windows 98 SE. That OS will need the supplied driver to be installed. The scanner will be recognized as a removable disc when connected, and the pictures can be easily copied with Windows Explorer.

Declaration of conformity

We,
Nedis B.V.
De Tweeling 28
5215MC 's-Hertogenbosch
The Netherlands
Tel.: 0031 73 599 1055
Email: info@nedis.com

Declare that product:

 
Brand: König Electronic
Model: CMP-FILMSCAN20
Description: USB photo scanner

Is in conformity with the following standards

EN 55022: 2006
EN 61000-3-2:2006 Class A
EN 61000-3-3:1995+A1:2001+A2:2005
EN 55024: 1998+A1:2001+A2:2003
IEC 61000-4-2: 1995+A1:1998+A2:2005
IEC 61000-4-3: 2006
IEC 61000-4-4: 2004
IEC 61000-4-5: 2005
IEC 61000-4-6: 1996+A1:2000
IEC 61000-4-11: 2004

And complies with the requirements of the European Union Directives.

's-Hertogenbosch, 10 February 2009


NEDIS B.V.
Postbus 70509, 5201 CZ 's-Hertogenbosch NL
De Tweeling 28, 5215 MC 's-Hertogenbosch NL
Telefoon 073 - 599 96 41

Mrs. J. Gilad
Purchase Director

Safety precautions:



To reduce risk of electric shock, this product should ONLY be opened by an authorized technician when service is required. Disconnect the product from mains and other equipment if a problem should occur. Do not expose the product to water or moisture.

Maintenance:

Clean only with a dry cloth. Do not use cleaning solvents or abrasives.

Warranty:

No guarantee or liability can be accepted for any changes and modifications of the product or damage caused due to incorrect use of this product.

General:

Designs and specifications are subject to change without notice.

All logos brands and product names are trademarks or registered trademarks of their respective holders and are hereby recognized as such.

Attention:



This product is marked with this symbol. It means that used electrical and electronic products should not be mixed with general household waste. There is a separate collections system for these products.

Copyright ©

