


Instruction manual 192708

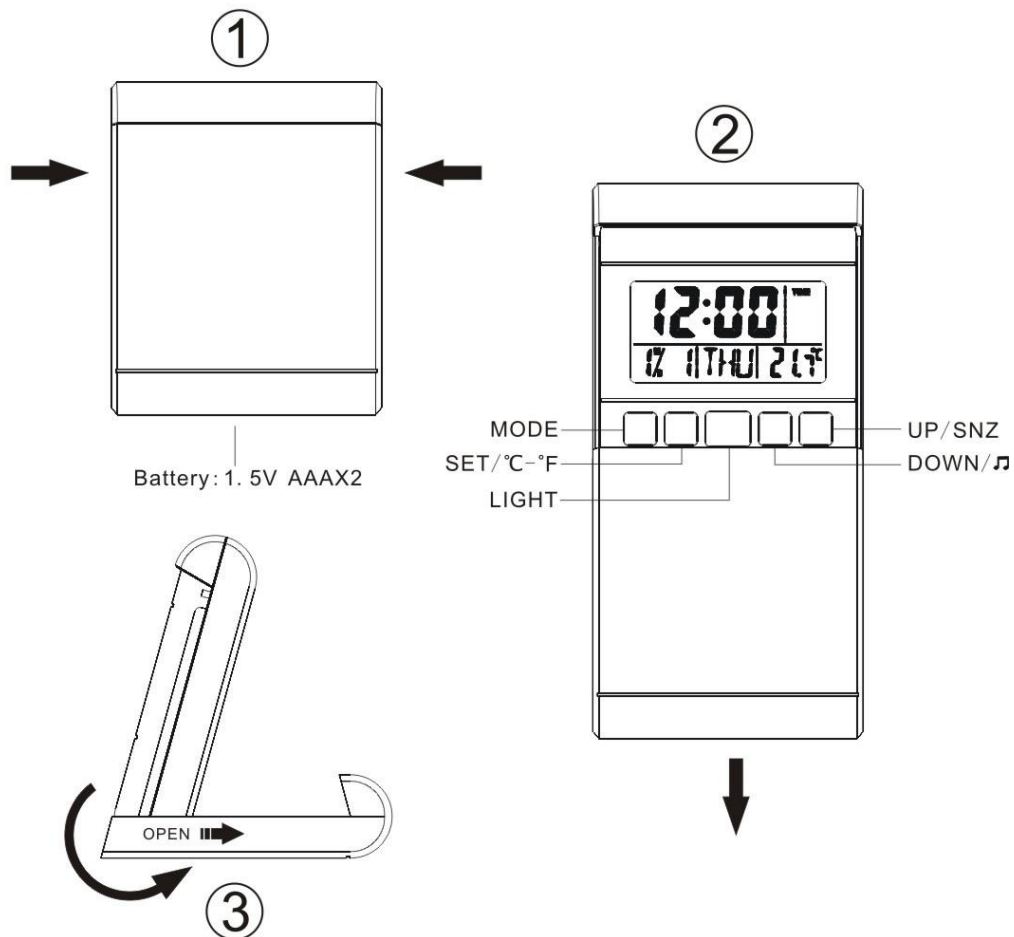

Functions:

1. Clock with perpetual calendar
2. Alarm with 3 minute snooze function
3. Temperature display in °C/°F
4. Timer (max:23hr:59min)
5. Music play
6. Birthday reminder
7. Blue LED backlight

Operations:

1. Insert 2 x AAA size 1.5V batteries into the battery holder.
2. Under normal operating, press MODE to change settings in the following order:

TIME – ALARM – BIRTHDAY REMINDER - TIMER

a. Time (press MODE once)

In 12hr/24hr mode, press UP to change 12hr/24hr format. To adjust time press SET again and you can change hour/minute/year/date using UP/DOWN buttons.

b. Alarm (press MODE twice)

To set alarm press SET and UP/DOWN to set alarm time and alarm music (7 different songs and 2 different BIBI sounds). Press SET to confirm the settings. When alarm is activated, "ALARM" will be shown on display. To disable alarm function press SET again after alarm music selection has been made during setting procedure. The display will show ----.

When alarm is playing press any button to disable it. When SNOOZE function is enabled

the alarm sound will repeat after 3 minutes (maximum 4 times).

Under normal operating, when display shows "ALARM", press UP key to turn ON/OFF snooze function. The display will show "SNOOZE" on display when function is enabled.

c. Birthday remind (press MODE three times)

To set "birthday reminder", press SET to enter into and time setting. Press UP/DOWN key to adjust values and then press SET to confirm setting. To disable "birthday reminder" alarm function press SET again after setting of date has been made during setting procedure. The display will show ----.

When birthday reminder date/time has been reached, it will play birthday song for five minutes.

d. Countdown timer (press MODE 4 times)

Press SET to enter countdown timer mode and set hours and minutes (maximum 23hr:59min). Countdown will imm. start after pressing SET again. "TIMER" will blink on display. When timer reaches "00:00" alarm sound will last one minute.

3. To return to normal operating during any setting procedure press MODE button several times till actual time is displayed again.

In all setting modes, press UP/DOWN key to adjust values or hold the key to increase values quickly.

During normal operating, press DOWN key to turn ON/OFF music function. The display will show the music sign "🎵" and 7 songs will be played circularly.

During normal operating, press SET to select °C or °F.

Alarm clock will return to normal mode after one minute when no button has been pressed during one of above processes.

DISPOSAL AT END OF WORKING LIFE:

Discarded appliances and electronic devices often still contain valuable materials, therefore do not throw them away, instead hand them in to the store where you buy a new appliance or to your local council recycling depot.

In accordance with the waste guidelines for electrical and electronic equipment, this product must be disposed of separately. If you wish to dispose of this product in the future, do NOT discard it with the household waste, but hand it in at your local refuse collection depot.

In compliance with the directives on Waste Electrical and Electronic Equipment, this product must not be discarded with domestic waste but should be disposed of separately for recycling. If you wish to dispose of this product in the future, do NOT throw it away with the household rubbish but hand it in at a specially designated place, such as your municipal domestic chemical waste depot.

Never throw empty batteries away, but deposit them in special battery boxes or hand them in as domestic chemical waste at your municipal depot.

