



## **MODEL: 332550**

### **OPERATING INSTRUCTIONS**

#### **CONTROL LOCATIONS**

1. SNOOZE BUTTON
2. ALARM VOLUME (HIGH/LOW/OFF) SWITCH
3. ALARM BUTTON
4. TIME BUTTON
5. LIGHT ON/OFF SWITCH
6. MINUTE BUTTON
7. HOUR BUTTON

#### **POWER SUPPLY**

Your clock is designed to operate on alternating 230 Volts 50 Hz power supply. The clock starts running when the plug is connected into a power outlet.

The entire display will flash meaning the incorrect time is being displayed. This is a normal condition and will stop when the correct time has been set.

#### **ALARM ON INDICATOR**

A bell icon appears in the lower right hand corner of the display indicating that the alarm has been set.

#### **TIME SETTING**


Press and hold the TIME BUTTON (4) and the HOUR BUTTON (7) to advance the hour display. Then press and hold the TIME BUTTON (4) and the MINUTE BUTTON (6) to advance the minutes until the correct time is displayed.

#### **ALARM TIME SETTING**

Move the ALARM VOLUME HIGH/LOW/OFF SWITCH (2) to OFF position. To set the alarm, press and hold the ALARM BUTTON (3) and the HOUR BUTTON (7). Then press and hold the ALARM BUTTON (3) and the MINUTE BUTTON (6) until the correct alarm time is displayed.

#### **ALARM AND SNOOZE FUNCTION**

To activate the alarm, move the ALARM VOLUME HIGH/LOW/OFF switch (2) to either the HIGH position or the LOW position. The ALARM On Indicator will light and the alarm will sound at the preset alarm time. When the alarm sounds, press the SNOOZE button (1) on the top of the clock and the alarm will be quiet for 8-9 minutes and then sound again. To shut off the alarm, slide the ALARM VOLUME HIGH/LOW/OFF switch (2) to OFF position.

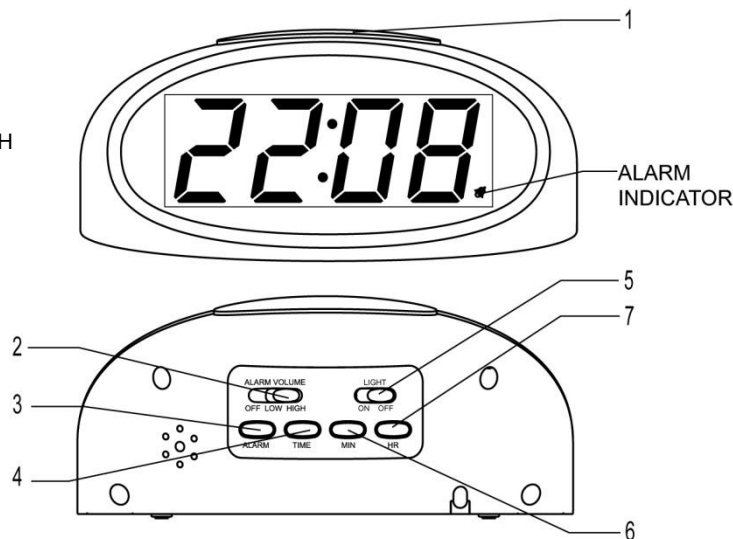

#### **NIGHT LIGHT OPERATION**

To activate the nightlight, move the LIGHT ON/OFF switch (5) to the LIGHT ON position.

To turn off the nightlight, move the LIGHT ON/OFF switch (5) to the LIGHT OFF position.

#### **BATTERY BACK-UP (Battery Not Included)**

In the event of a power failure, this unit will automatically switch to a battery stand-by circuit when a battery is installed. Open the BATTERY COMPARTMENT on the bottom of the unit and install a 9-volt battery. Under battery operation, the clock will keep the time running and the alarm will sound at the present time. Only the clock display will not light to save battery energy. If you have a long power failure you may need to make a slight adjustment to the clock time after AC power returns by following the "Time Setting" instructions.

#### **WARNING**

- The apparatus shall not be exposed to dropping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- The mains plug shall remain readily operable when the plug is connected into a power outlet.

#### **DISPOSAL AT END OF WORKING LIFE**

Discarded appliances and electronic devices often still contain valuable materials, therefore do not throw them away, instead hand them in to the store where you buy a new appliance or to your local council recycling depot.

In accordance with the waste guidelines for electrical and electronic equipment, this product must be disposed of separately. If you wish to dispose of this product in the future, do NOT discard it with the household waste, but hand it in at your local refuse collection depot.

In compliance with the directives on Waste Electrical and Electronic Equipment, this product must not be discarded with domestic waste but should be disposed of separately for recycling. If you wish to dispose of this product in the future, do NOT throw it away with the household rubbish but hand it in at a specially designated place, such as your municipal domestic chemical waste depot.

Never throw empty batteries away, but deposit them in special battery boxes or hand them in as domestic chemical waste at your municipal depot.

