


Item 862283

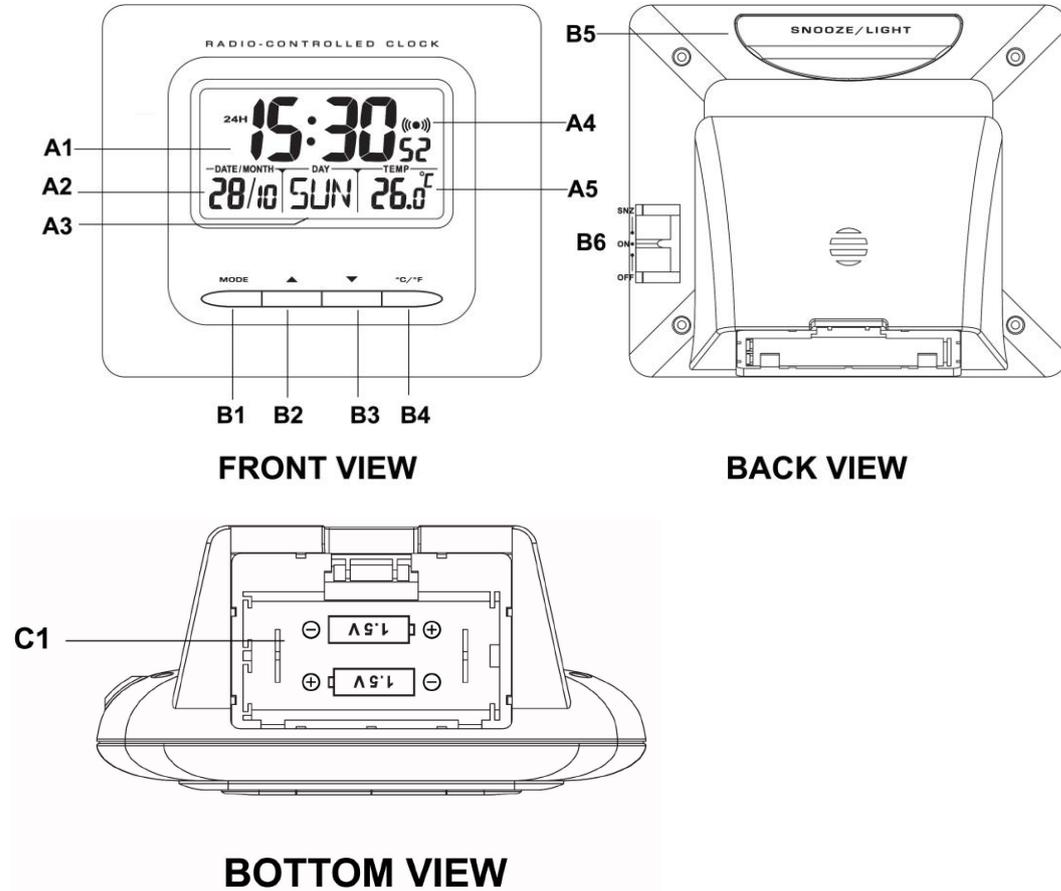

Main Unit Appearance



Part A-LCD

A1: Real Time

A2: Month / Date.

A3: Day of Week

A4: Alarm icon

A5: Temperature

Part B-Button

B1: MODE BUTTON

B2: “▲” BUTTON

B3: “▼” BUTTON

B4: “C/F” BUTTON

B5: SNOOZE/LIGHT BUTTON

B6: “ALARM,ANOOZE NO/OFF” Slide key

Part C-Structure

C1: Battery Compartment

Set Up:

- Remove battery compartment door at the back of the unit.
- Insert one AA battery.

Manual Time Setting:

- Press “MODE” (B1) button to select time display.
- Hold “MODE” (B1) button for 3 seconds and time flashes.
- Press “▲”(B2) & “▼”(B3) to adjust Time, Year, Month and Date.
- The setting sequence is shown as follow: Hour, Minutes, Second, Year, Month, Day, Language of Weekday, Time Zone.
- Press “MODE” (B1) button to confirm each setting.
- There are 7 languages, English, German, French, Spanish, Italian, Dutch and Denmark, for day-of-week. The languages and their selected abbreviations for each day of the week are shown in the following table.

Language	Sunday	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday
English, EN	SUN	MON	TUE	WED	THU	FRI	SAT
German, GE	SON	MON	DIE	MIT	DON	FRE	SAM
French, FR	DIM	LUN	MAR	MER	JEU	VEN	SAM
Spanish, ES	DOM	LUN	MAR	MIE	JUE	VIE	SAB
Italian, IT	DOM	LUN	MAR	MER	GIO	VEN	SAB
Dutch, NE	ZON	MAA	DIN	WOE	DON	VRI	ZAT
Denmark, DA	SON	MAN	TIR	ONS	TOR	FRE	LOR

- The Time Setting Mode will automatically exit in 10 seconds without any adjustment.

12/24 Hour Display mode:

- Press “▲”(B2) button to select 12 or 24 hours mode.

Daily Alarm Setting :

- Press “MODE”(B1) to select Alarm Time Display
- Hold “MODE”(B1) for 3 seconds and Alarm Time flashes.
- Pressing “▲”(B2) & “▼”(B3) buttons to adjust the alarm time.
- Press “MODE”(B1) to confirm each setting.

Snooze Alarm Function :

- Slide the “ALARM,ANOOZE NO/OFF” (B6) switch to ON to switch on the alarm. "  " appears on the display
- Slide the “ALARM,ANOOZE NO/OFF” (B6) switch to SNOOZE to switch the snooze alarm. "Zz" appears on the display.
- Press SNOOZE/LIGHT (B5) when alarm alerts. The alarm snoozes for 4 minutes, then it alerts again. “Zz” flashes on the LCD during the snooze time.
- Simply press other buttons or slide “ALARM,ANOOZE NO/OFF” (B6) switch to OFF to stop snooze alarm.

Thermometer:

- Press “°C/°F” button (B4) to select Outdoor Temperature in Celsius mode/ Fahrenheit mode.

Back Light:

- Press SNOOZE/LIGHT (B5), back light states for 3 seconds

Notes:

- If the unit does not work properly, please take off the batteris. Wait a few second for the all display turn off. Insert batteris again. The unit will reset.
- Never use the clock in bathroom or any other area with high humidity
- The operating temperature of the clock is 0°C – 50°C
- The clock loses its time information when the battery is removed

