



Garage Door Tilt Sensor (GDS1300)



User Manual


Activation

Notice


Please make sure you insert the battery into the device first.




1

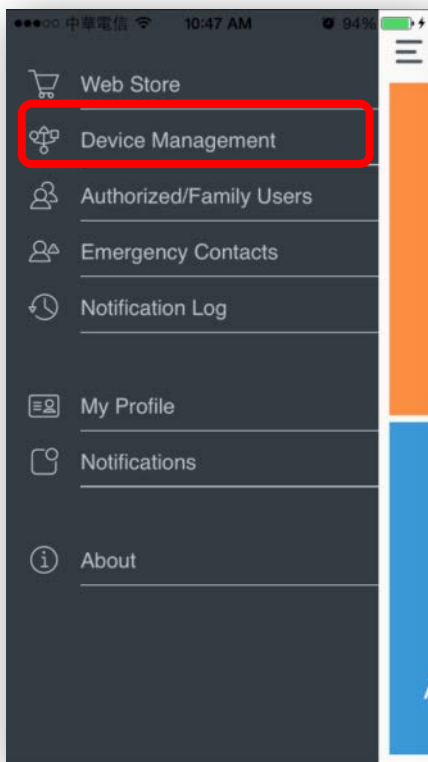

2

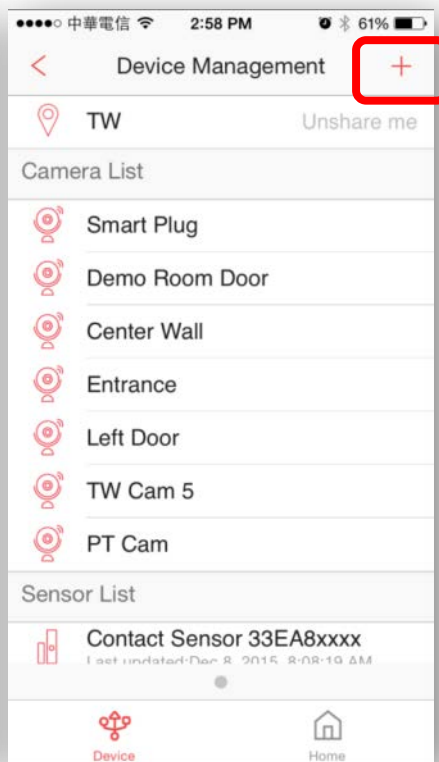

3

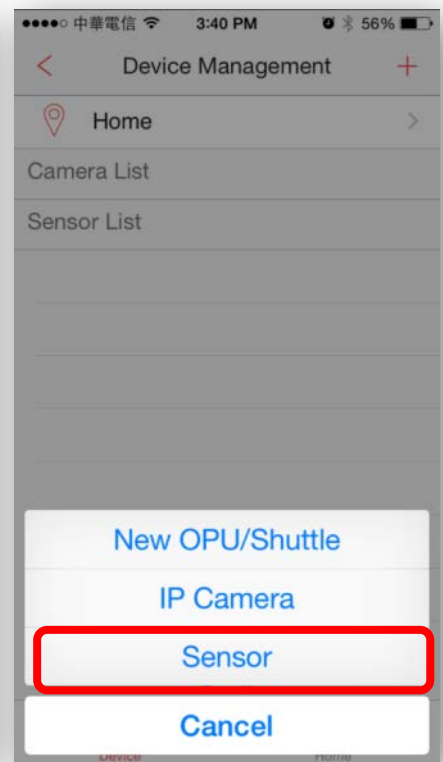

In the APP, tap the sidebar menu, tap “Device Management”, tap “+” in upper-right corner, and then select “Sensor”.


Notice: The device activation steps are only for adding new devices.




Scan the QR code on the side of the sensor.




Once the device has been added into the system, the APP will display “Garage Tilt Sensor XXX has been added successfully”.

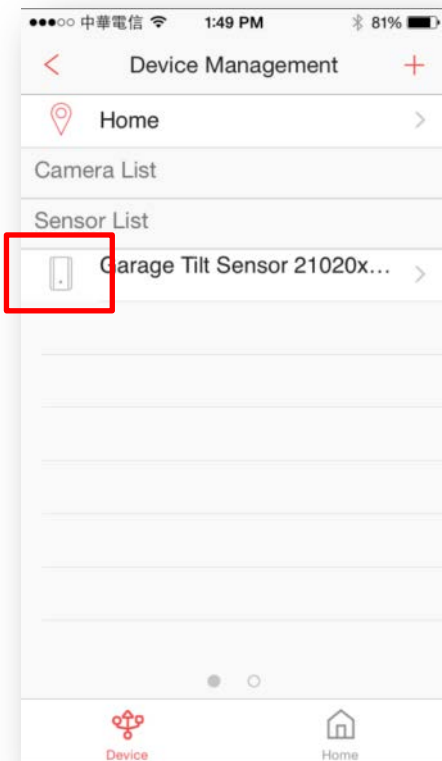


After adding the sensor, its icon in Device Management will appear in grey.

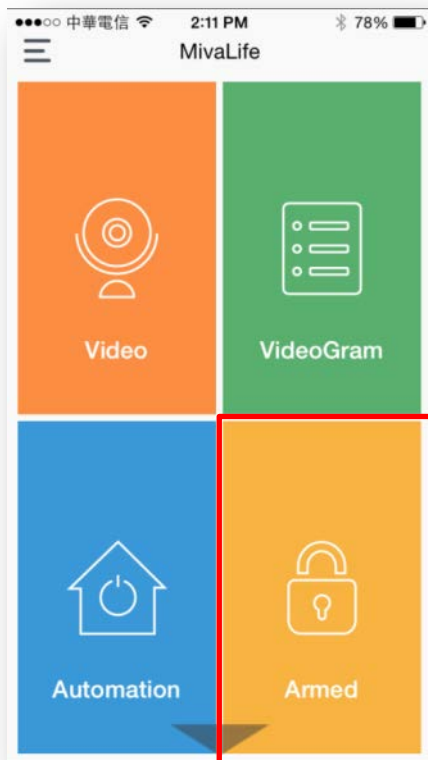


Before going to the next step, please make sure the system is Armed or in Stay Mode.

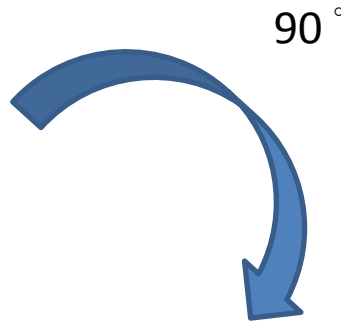

Tilt the device from an upright to a flat position to test the device for the first time.


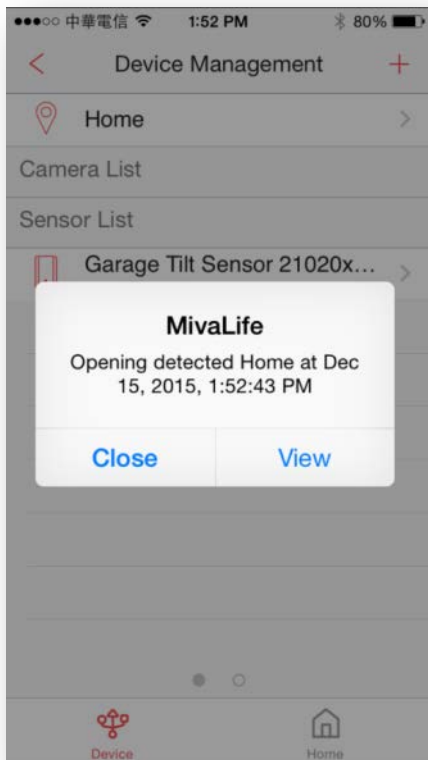


A push notification
“Opening detected” will
be received.

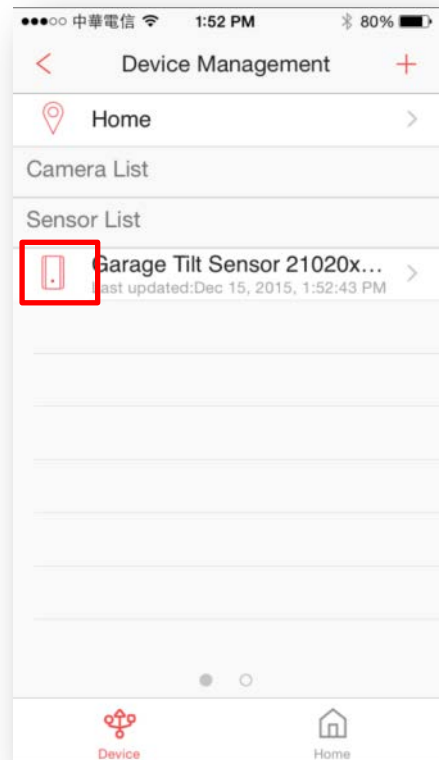

The sensor icon in Device
Management will
become red.


Notifications

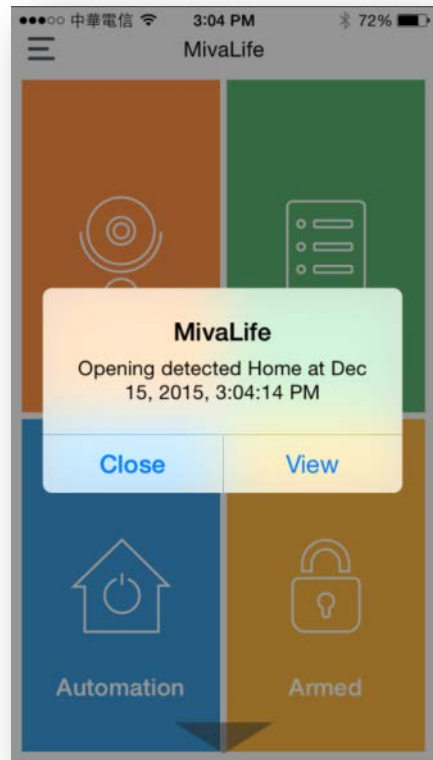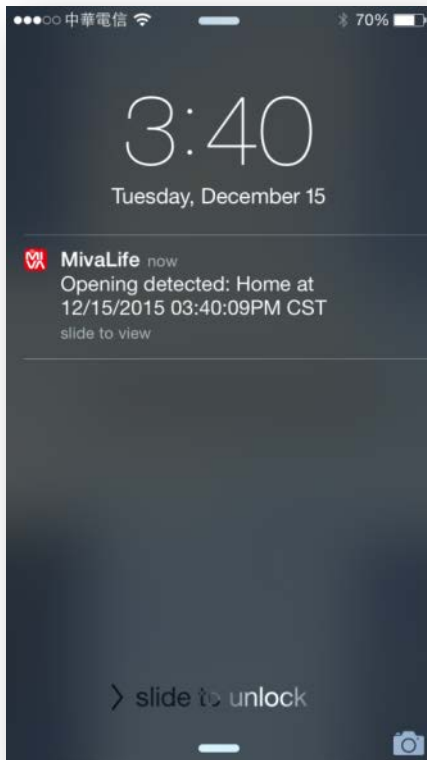


In Armed status, when the garage door has been opened and the sensor detects that the pitch has been tilted more than 45°, an in-App mobile alert will be sent to you immediately.

Set Still Open Reminder


1

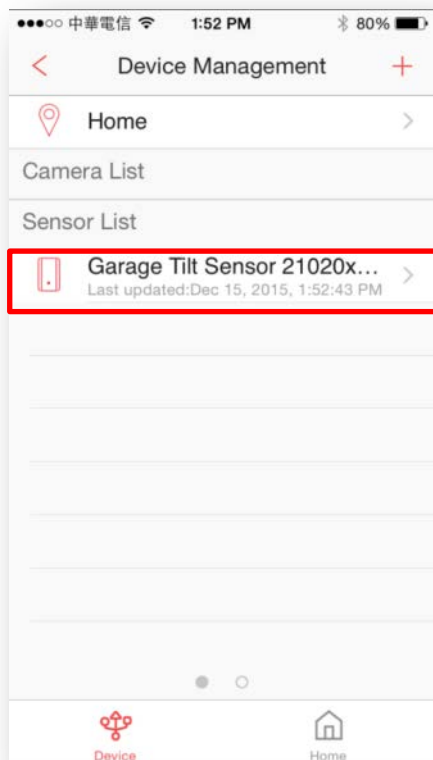

2

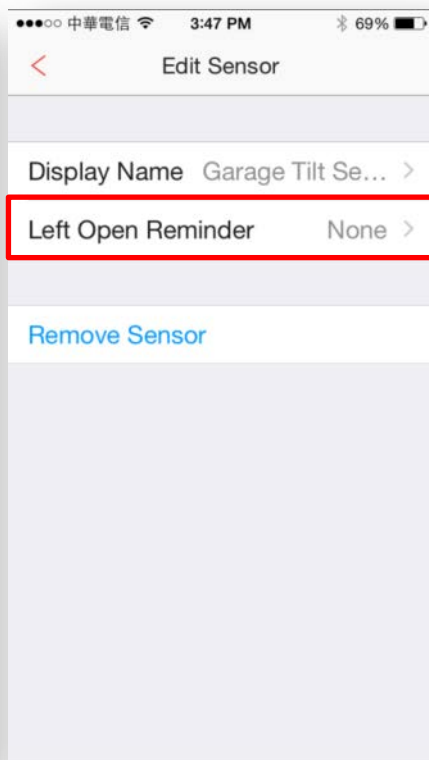

3

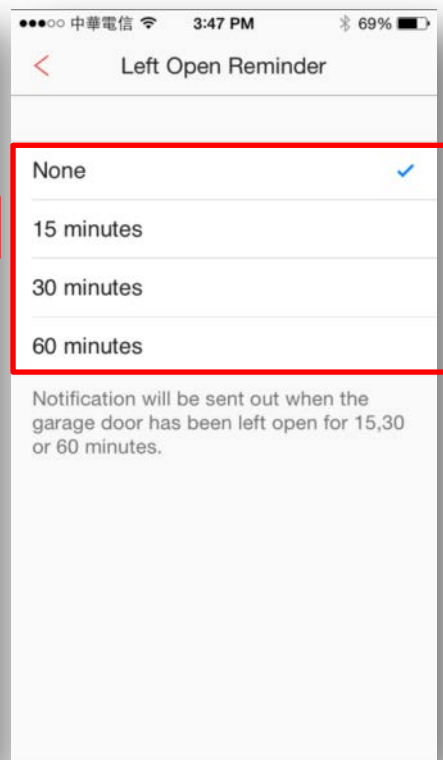

In Device Management, select the “Garage Tilt Sensor” you want to edit. Tap ‘Left Open Reminder’. Then set the notification interval from 15 to 60 minutes.



MivaLife 5m ago
Still Open: Home at 12/15/2015
03:19:28PM CST
slide to view


A “Still Open” notification will be sent if the garage door has been left opened for a while, no matter whether the system is Armed, in Stay Mode, or Disarmed.

Installation



1

Paste double-sided tape on the back of the mounting plate.

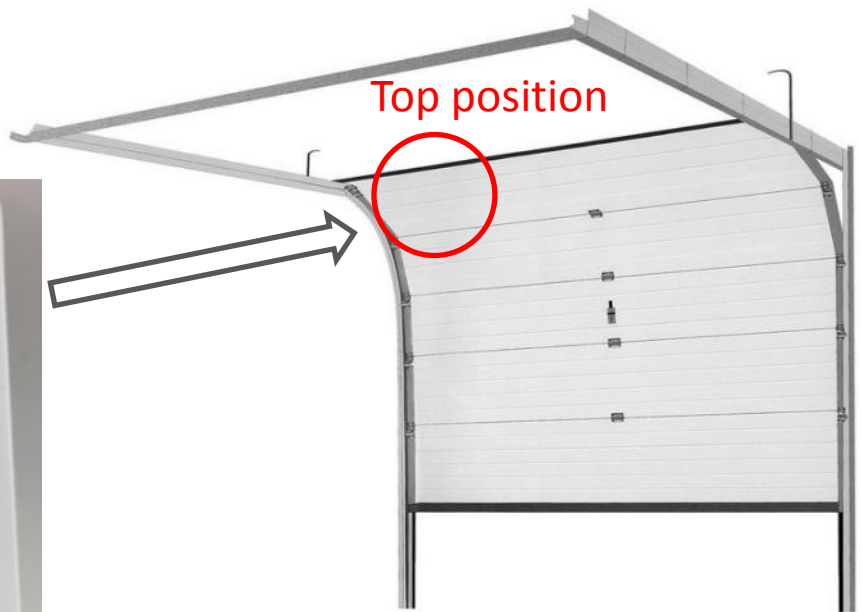


2

Attach the mounting plate to the **top panel** and inside of your garage door.

Notice:
When attaching to the garage door, the tab should be at the bottom.

3

Slide in the sensor onto the mounting plate.

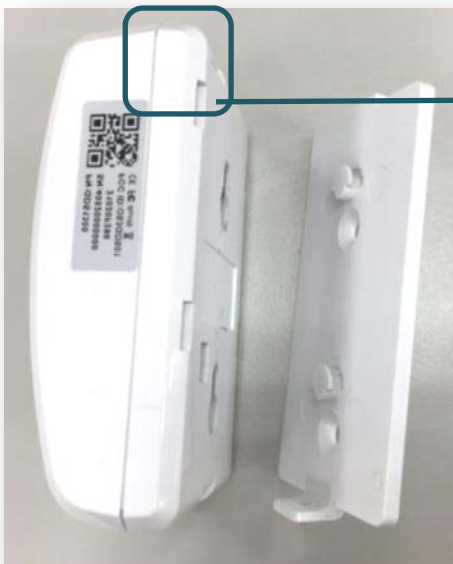

Notice:

When mounted, there is an arrow on the side of the sensor that lets you know it is mounted correctly.

Other information

Tamper Alarm

A “Device detachment detected” notification will be sent if the tamper switch has been triggered.



LED Indicator

- Normal Operation: LED off
- Heartbeat, Tamper, Door Open & Low Battery: red and blinking

