


Item 866433




Feature

- Radio controlled time with manual setting option
- Temperature measuring : range 0°C ~ +50°C.
- Humidity measuring range : 20%~99%
- Perpetual Calendar Up to Year 2069.
- 12/24Hour time display selectable.
- Day of week in 5 Languages Selectable.
- Solar power supply
- Size : 280X190X24 mm

Main Unit Appearance

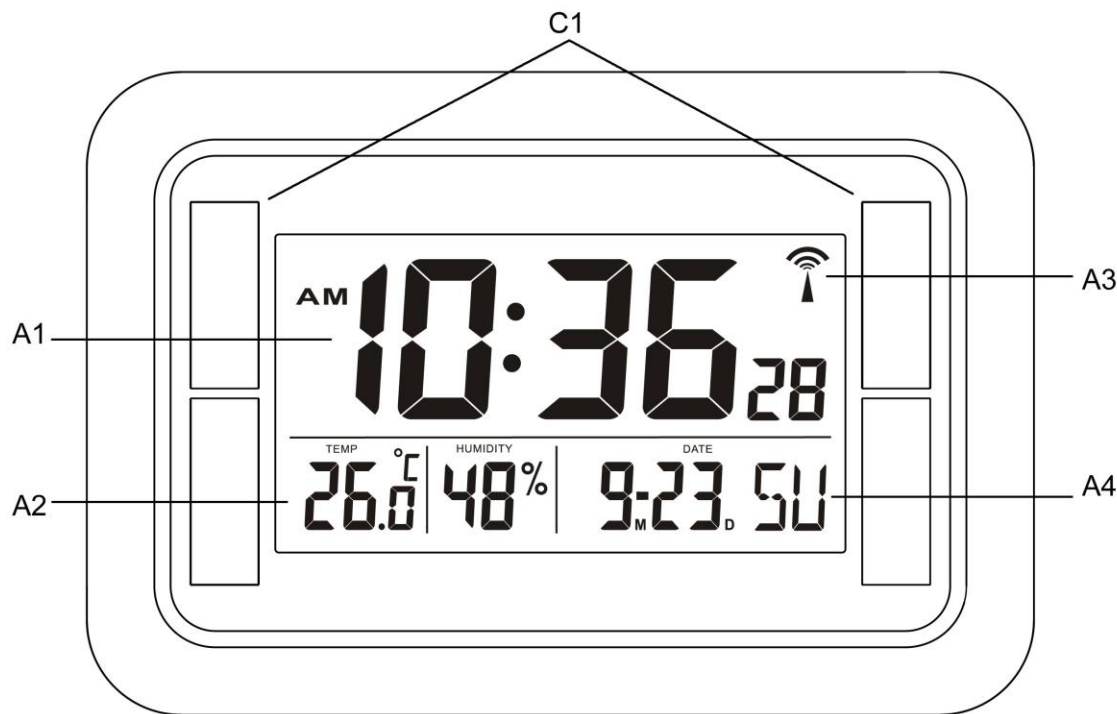

Front View

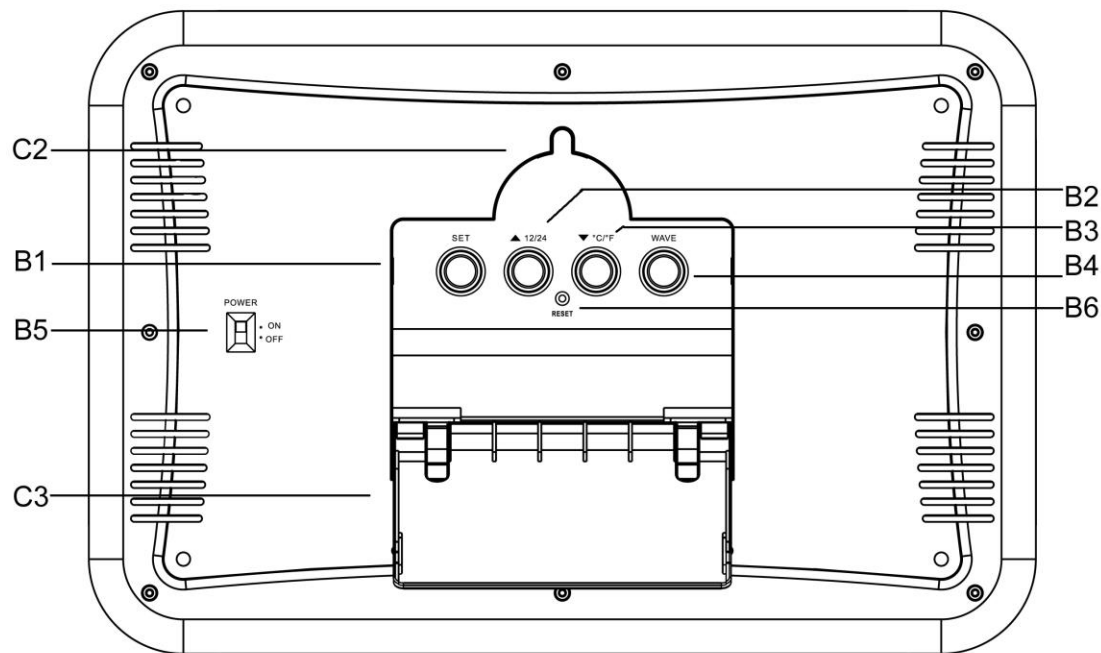

Back View

Part A- LCD

A1 : Radio Controlled Time

A2 : Temperature and Humidity display

A3 : Radio Controlled Icon

A4 : Date and Day of week display

Part B Buttons

B1 : "SET" button

B2 : "▲ (12/24)" button

B3 : "▼ °C/°F" button

B4 : "WAVE" button

B5 : POWER ON/OFF slide switch

Part C- Structure

C1 : Solar Powered panel





C2 : Wall Mount Hole


C3: Stand

Start-up



Push the "POWER ON/OFF"(B5) slide switch to on the unit.

Radio Controlled Clock:

- After start-up the clock will scan the DCF time signal ("  " flashes on the LCD). Buttons will not function while scanning for DCF unless they are well received or stopped manually.
- The clock automatically scans the time signal at 3.00 a.m. everyday to maintain accurate timing. For failed reception, scanning stops ("  " on the LCD disappear) and repeats again at 4.00 a.m. 5.00a.m. and 6.00a.m.
- The clock manually scans the DCF time signal by holding "WAVE" button (B4) for 3 seconds. For failed reception, scanning stops. ("  " on the LCD disappear).
- Press "WAVE" button (B4) to stop scanning when receiving DCF time signal.
-  flashes indicate now is receiving DCF time signal.

-  turns on indicate signal received successfully
- "DST" is shown on the LCD if it is in Daylight Saving Time mode


Manual Time Setting:

- Hold "SET" button (B1) for 3 seconds to enter Clock/Calendar setting Mode .
- Press " (12/24) " (B2) or " °C/°F " (B3) buttons to adjust the setting and press "SET" button (B1) to confirm each setting.
- The setting sequence is shown as follow: Hour, Minutes, Second, Year, Month/Day sequence, Month, Day, Time Zone, Day-of-week language.
- 5 languages can be selected in Day-of-week, they are: German, English, Spanish , Italian and French,. The languages and their selected abbreviations for each day of the week are shown in the following table.

Language	Sunday	Monday	Tuesday	Wednesda y	Thursda y	Friday	Saturday
German, GE	SO	MO	DI	MI	DO	FR	SA
Great Britain, GB	SU	MO	TU	WE	TH	FR	SA
Spanish, ES	DO	LU	MA	MI	JU	VI	SA
Italian, IT	DO	LU	MA	ME	GI	VE	SA
French, FR	DI	LU	MA	ME	JE	VE	SA

- The zone is used for the countries where can receive the DCF signal but the time zone is different from the German time.
- When the country time is faster than the German time for 1 hr, the zone should be set to 1. Then the clock will automatically set 1 hour faster from the signal time received.

12/24 Hour Display mode:

- Press " (12/24) " button (B2) to select 12 or 24 hours mode.

Thermometer:

- Press " °C/°F " button (B3) to select Temperature to be displayed in Celsius

mode or Fahrenheit mode.

Note:

- *Use a pin to press the button (B6) to reset the unit if it does not work properly.*
- *Avoid placing the clock near interference sources/metal frames such as computer or TV sets.*
- *Buttons will not function while scanning for DCF time signal unless they are well received or stopped manually.*
- *All Setting Mode will automatically exit in 15 seconds without any adjustment.*

DISPOSAL AT END OF WORKING LIFE:

Discarded appliances and electronic devices often still contain valuable materials, therefore do not throw them away, instead hand them in to the store where you buy a new appliance or to your local council recycling depot.

In accordance with the waste guidelines for electrical and electronic equipment, this product must be disposed of separately. If you wish to dispose of this product in the future, do NOT discard it with the household waste, but hand it in at your local refuse collection depot.

In compliance with the directives on Waste Electrical and Electronic Equipment, this product must not be discarded with domestic waste but should be disposed of separately for recycling. If you wish to dispose of this product in the future, do NOT throw it away with the household rubbish but hand it in at a specially designated place, such as your municipal domestic chemical waste depot.

Never throw empty batteries away, but deposit them in special battery boxes or hand them in as domestic chemical waste at your municipal depot.

