


USER'S MANUAL



Profoon®

TX-157
Big Button

OVERVIEW

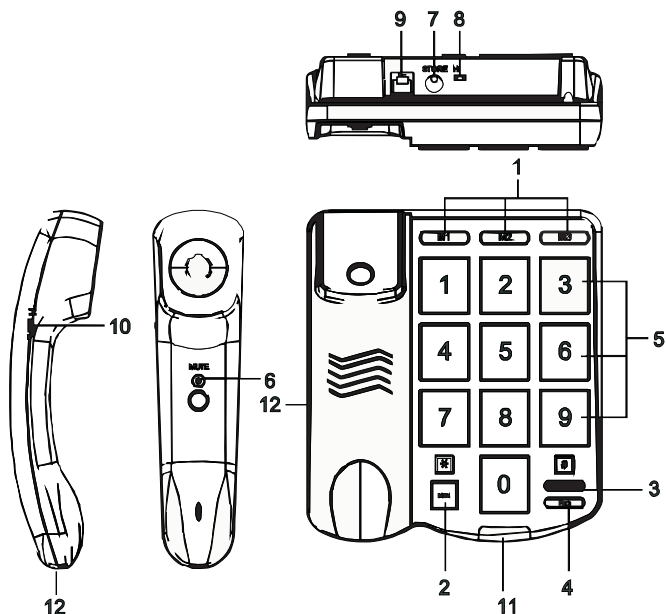

1. Direct memory buttons
2. Memory button
3. Redial memory/pause button
4. Flash function button
5. Keypad
6. Mute button
7. Store button
8. Ring volume switch
9. Telephone line input
10. Receiver volume switch
11. Call indicator
12. Spiral cable input

INSTALLATION

First connect the telephone line and spiral cable to the phone; then connect the telephone line to the telephone network.

Your phone is ready for use as soon as the telephone plug is inserted into the telephone wall socket.

WALL-MOUNTING

The TX-157 can be used as a wall-mounted model. Above each other and at a distance of 10cm, drill two holes in the wall and insert plugs and screws. Leave the screws protrude for several millimetres.

Suspend the telephone by sliding the cut-outs at the rear of the device over the screws in the wall and pressing the phone downwards.

If desired, you can neatly hide the telephone line using cable-ties.


OPERATION

RECEIVING CALLS:

The ring volume can be adjusted using the ring volume switch at the rear of the phone. The call indicator will illuminate when receiving an incoming call.

Pick up the receiver and answer the call.

RECEIVER VOLUME:

 Use the receiver volume switch on the receiver to adjust the receiver volume.

MAKING CALLS:

Pick up the receiver, wait for the dialling tone and enter the phone number using the keypad.

FLASH:

The FLASH function briefly interrupts the telephone connection. This function allows you to transfer calls via certain home or office switchboards or to activate telephone services such as 'Call-Waiting'.

REDIAL MEMORY:

In case the other side was busy or you'd like to call the number again, the TX-157 memorises the last dialled number:

1. pick up the receiver and wait for the dialling tone
2. press the **REDIAL** button once to automatically redial the last dialled number.

The length of this memory can be up to 32 digits.

TELEPHONE SERVICES:

The * (asterisk) and # (pound) buttons are function buttons used for various telephone services (tele-shopping, tele-banking, etc.) and information numbers. These buttons can also be required when performing various functions for home or office switchboards or other telecommunications devices. Please refer to the related instructions or services.

MEMORIES

Programming:

1. pick up the receiver
2. press 1x the **STORE** button (rear of telephone)

3. use the keypad to enter the telephone number of up to 16 digits (*press the PAUSE button to program a dialling pause*)
4. press 1x the **STORE** button again
5. press one of the direct memory buttons (M1 ~ M3) or one of the 10 call buttons (0 ~ 9) under which you'd like to save the number
6. put down the receiver

Dialling:

1. pick up the receiver
2. press one of the direct memory buttons (M1 ~ M3) or the **MEM** button followed by one of the 10 call buttons (0 ~ 9)
3. the number will now be dialled

Deleting or correcting:

A memory number cannot be deleted or corrected. In this case, program the correct number or a non-existing number over the old number; the old number will then be overwritten.