

## Office 1-2-3

# Rychlá instalační příručka

11-2017 / v1.0

### **Edimax Technology Co., Ltd.**

No. 278, Xinhua 1st Rd., Neihsu Dist., Taipei City, Taiwan

Email: [support@edimax.com.tw](mailto:support@edimax.com.tw)

---

### **Edimax Technology Europe B.V.**

Fijenhof 2, 5652 AE Eindhoven, The Netherlands

Email: [support@edimax.nl](mailto:support@edimax.nl)

---

### **Edimax Computer Company**

3350 Scott Blvd., Bldg.15 Santa Clara, CA 95054, USA

Live Tech Support: 1(800) 652-6776

Email: [support@edimax.com](mailto:support@edimax.com)

# OBSAH

---

<b>I</b>	<b><i>Základní informace.....</i></b>	<b>3</b>
<b>II</b>	<b><i>Informace o produktu.....</i></b>	<b>5</b>
II-1	Obsah balení.....	5
II-2	Systémové požadavky.....	6
II-3	Přehled hardwaru .....	6
II-4	Stav LED .....	7
II-5	Resetování.....	7
<b>III</b>	<b><i>Rychlé nastavení .....</i></b>	<b>8</b>
III-1	Počáteční nastavení .....	8
III-2	Průvodce nastavením .....	12
<b>IV</b>	<b><i>Office 1-2-3 Rozvinutí .....</i></b>	<b>26</b>

# **I Základní informace**

---

- 1.** Všechny podpůrné dokumenty, video a programy můžete najít na <http://office123.edimax.com> nebo zjistit informace na místních webových stránkách.
- 2.** Toto je Rychlá Instalační Příručka. Kompletní Uživatelská Příručka nebo QIG v jiných jazycích můžete najít na přiloženém CD nebo na níže uvedeném odkazu:  
[www.edimax.com/edimax\\_pro/download/Office1-2-3](http://www.edimax.com/edimax_pro/download/Office1-2-3)
- 3.** Během počátečního zapnutí prosím počkejte 10 minut, než se přístupové body mezi sebou navzájem.
- 4.** Stáhněte si náš **IP Finder** z níže uvedeného odkazu a vyhledejte hlavní přístupový bod pro konfigurace.  
[www.edimax.com/edimax\\_pro/download/IPfinder](http://www.edimax.com/edimax_pro/download/IPfinder)
- 5.** Pokud se vám nedaří spustit IP Finder: Klikněte **pravým tlačítkem myši** na IP Finder a zvolte "Vlastností". Klikněte na **Odblokovat** na spodní výběru a klikněte na „OK“.
- 6.** Office 1-2-3 vytvoří zpočátku 3 bezdrátové sítě pro každý přístupový bod.



- 7.** Výchozí *uživatelské jméno* a *heslo* jsou **admin** a **1234**. Při změně hesla na hlavním přístupovém bodě se změní také heslo sekundárních přístupových bodů.

8. Pokud je to možné, doporučujeme používat výchozí nastavení. V případě potřeby stačí přidat uživatelské účty a hesla Wi-Fi.
9. Doporučuje se použít **import** a **export seznamu** pro jednoduchou správu hostních a kancelářských účtů.
10. Při konfiguraci zkontrolujte, zda je v pravé horní části stránky "Kruh Pokroku". Počkejte, než bude dokončen kruh pokroku před dalšími konfiguracemi.



11. Funkce RADIUS, kterou používá síť Kancelář, pracuje přímo s většinou operačních systémů s výjimkou verzí starších než Win 8.0. Pro Win 7 nastavení funkce RADIUS naleznete v přiloženém listu formátu A4, nebo ke stažení "RADIUS Authentication for Office Network" z odkazu: [www.edimax.com/edimax\\_pro/download/Office1-2-3](http://www.edimax.com/edimax_pro/download/Office1-2-3)
12. Tento produkt podporuje více zařízení na jeden přihlašovací účet.
13. Kliknutím na **Použít** během jakékoliv konfigurace se *restartuje* přístupový bod, což trvá déle, doporučuje se kliknut **Použít** pouze po změně všech nastavení.
14. Po připojení k síti Host byste měli otevřít prohlížeč, který spustí přihlašovací stránku. Pokud se přihlašovací stránka nezobrazuje, zadejte prosím adresu webové stránky vaší společnosti nebo [www.edimax.com](http://www.edimax.com) pro spuštění.
15. Je podporováno maximálně 128 účtů sítě Host a 256 účtů sítě Kancelář. Vícenásobné přihlášení (stejného účtu / heslo), jsou účtovány s použitím více účtů.
16. Tento účet Recepce je určen pouze k vytvoření lístků na účty hostů. Nemůže změnit ostatní nastavení.
17. Chcete-li **přidat** více přístupových bodů k rozšíření kancelářského pokrytí, obraťte se na svého zástupce a podívejte se na "**Office +1 AP**".


## II Informace o produktu

---

### II-1 Obsah balení



**1**

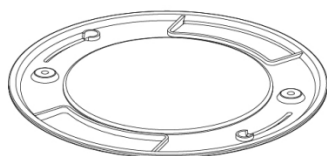

**2**




**3**




**4**




**5**

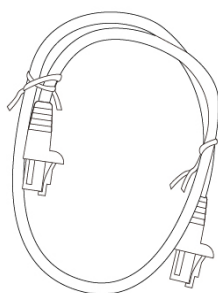

**6**

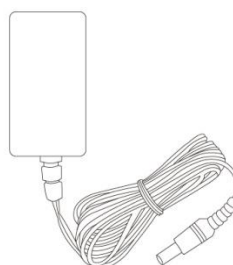

**7**

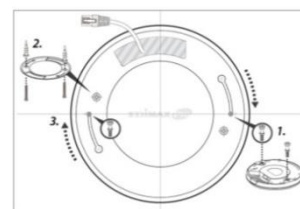

**8**

**1.** 3x Office 1-2-3 přístupový bod 3  
(1 Hlavní, 2 Sekundární)

**2.** 3x Držák pro montáž na strop

**3.** 3x Montážní set T-rail a šrouby

**4.** CD

**5.** Rychlá instalační příručka

**6.** 3x Ethernetový kabel


**7.** 3x Napájecí adaptér

**8.** 3x Šablona pro montáž na strop

## II-2 Systémové požadavky

- Kabelový/DSL modem a router
- PoE přepínač připojen k routeru
- Počítač s internetovým prohlížečem pro konfiguraci přístupového bodu

## II-3 Přehled hardwaru

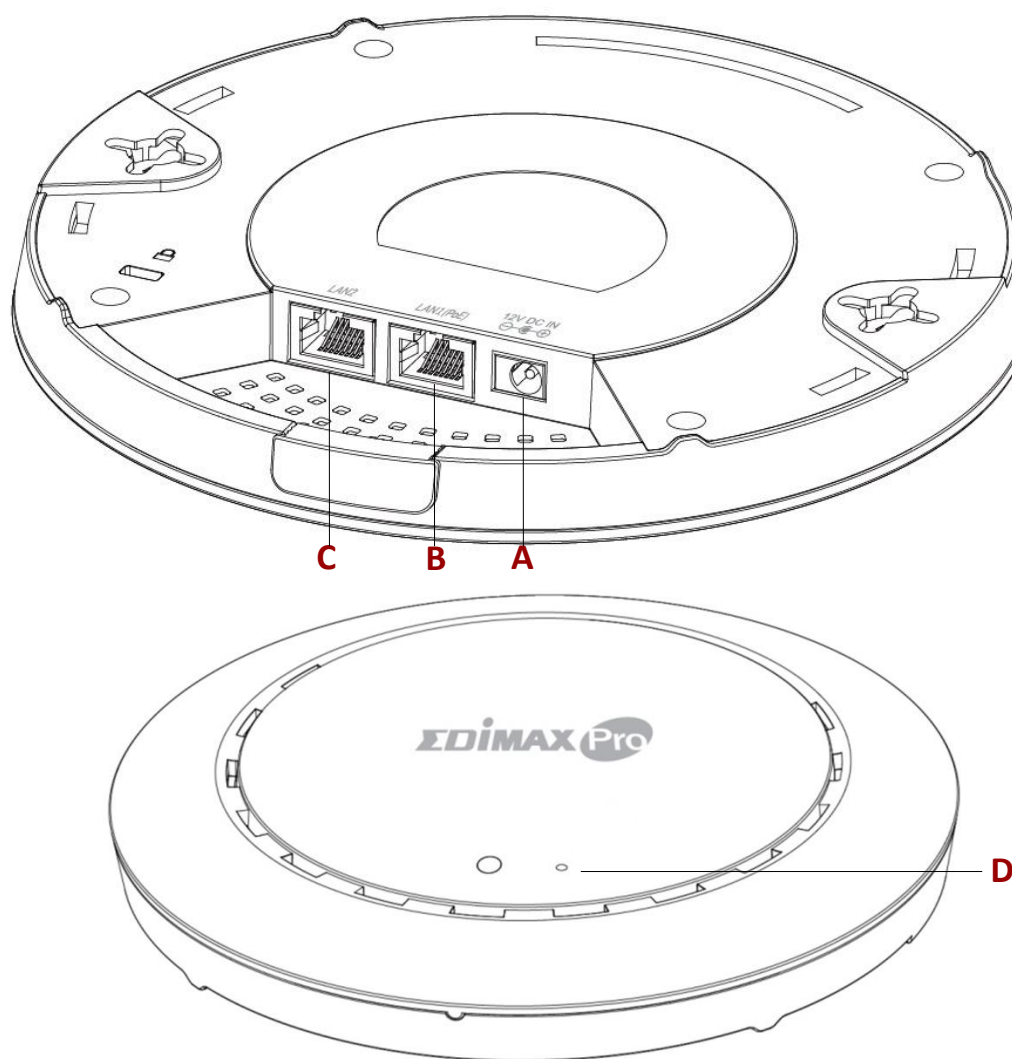

<b>A</b>	12V DC IN	Port pro připojení napájecího adaptéru
<b>B</b>	LAN 1 (PoE)	LAN port napájený přes Power over Ethernet (PoE)
<b>C</b>	LAN 2	LAN port
<b>D</b>	Reset	Tlačítko pro obnovení výchozího nastavení zařízení

## II-4 Stav LED

Barva	Stav	Popis
Modrá	Svítí	Přístupový bod je zapnutý.
	Pomalou bliká	Aktualizace firmwaru.
	Rychle bliká	Resetování do továrního nastavení.
Jantarová	Svítí	Spouštění.
	Bliká	Chyba.
Nesvítí	Nesvítí	Přístupový bod je vypnutý.


## II-5 Resetování

Pokud během používání zaznamenáte nějaké problémy, můžete zařízení resetovat do továrního nastavení. Tato volba vrátí všechna nastavení na výchozí hodnoty.

1. Stiskněte a držte tlačítko reset po dobu alespoň 10 sekund.



***Pro stisknutí tlačítka Reset pravděpodobně budete potřebovat jehlu nebo podobný tenký předmět.***

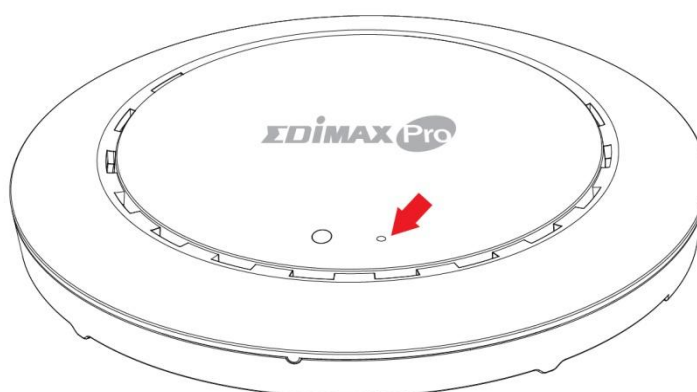

2. Vyčkejte, než proběhne restart přístupového bodu. Jakmile bude připraven pro nastavení, bude LED dioda svítit **modře**.

### III Rychlé nastavení

---

Toto rychlé nastavení je návodem k nastavení vaší vysokorychlostní sítě Wi-Fi Office 1-2-3. Vezměte prosím na vědomí, že tyto sekce mohou být později prohlédnuty pro další konfigurace, ale budou sloužit jako základy systému.


#### III-1 Počáteční nastavení

Počáteční nastavení je jednoduchý krok-za-krokem pro spuštění webového uživatelského rozhraní. Postupujte podle následujících kroků:


1. Připojte přístupový bod k přepínači PoE pomocí Ethernetového kabelu.
2. Připojte 3 přístupové body k PoE přepínač pomocí ethernetových kabelů. Ujistěte se, že je ethernetový kabel připojen k PoE port přístupového bodu, jak je uvedeno níže:



**POZNÁMKA:** Jeden z přístupových bodů má samolepku **Master**, zatímco ostatní dvě mají samolepky **Slave** co označují jejich vztahy.

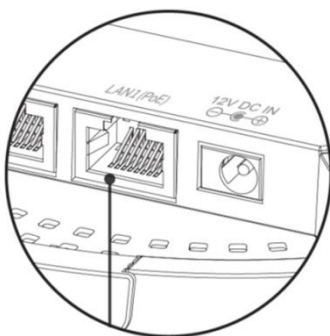

Pokud je to nutné, odstraňte krytku ze spodní části přístupového bodu. To vytváří další prostor pro vaše kabely.

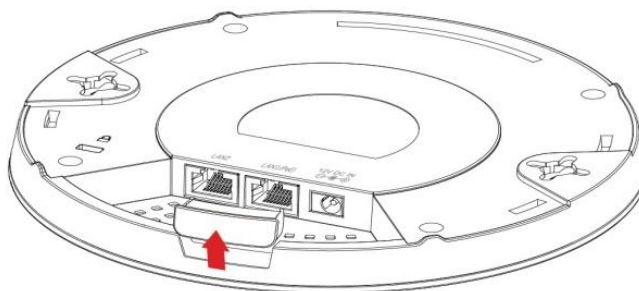




3. Počkejte prosím 10 minut, až se přístupové body vzájemně komunikují.
4. Stáhněte a nainstalujte Edimax Cloud Discovery Tool (IP Finder) do počítače z níže uvedeného odkazu:

[www.edimax.com/edimax\\_pro/download/IPfinder](http://www.edimax.com/edimax_pro/download/IPfinder)




5. Spustíte “EdimaxCloudDiscoveryTool”:

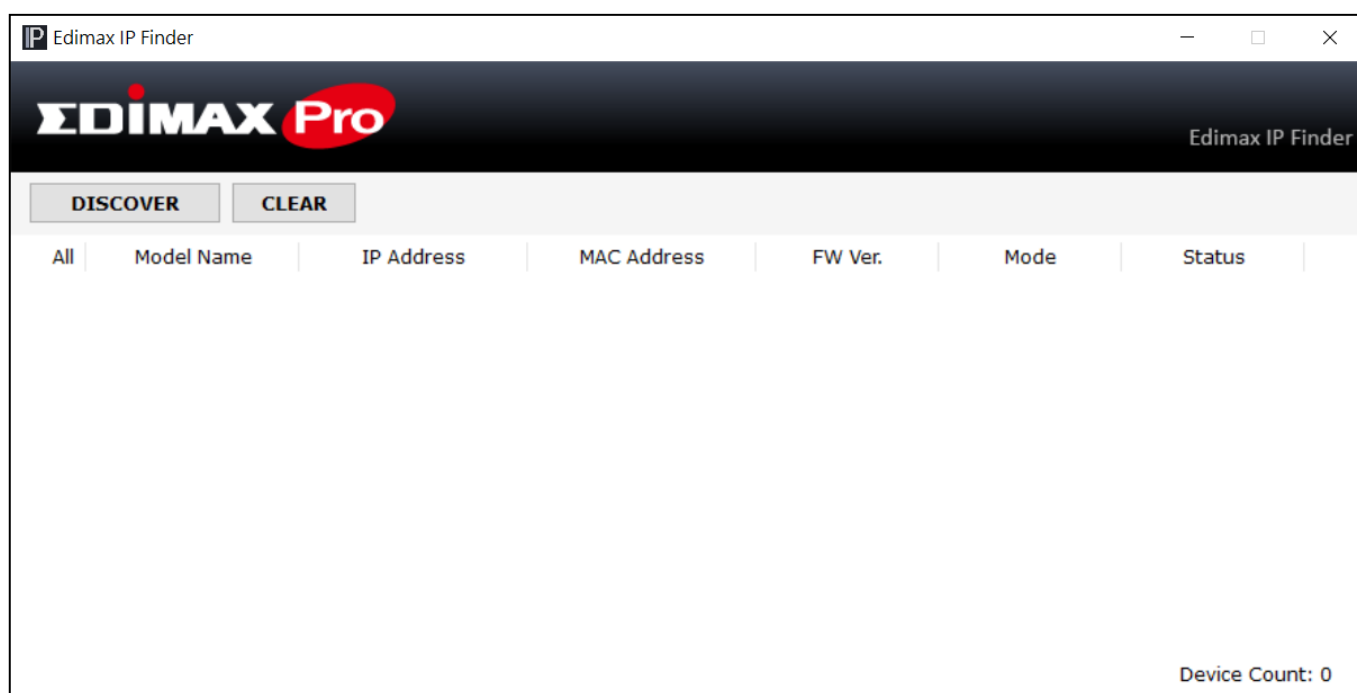


## Nelze spustit IP Finder Tool

Pokud se vám nepodaří spustit IP Finder Tool, může to být proto, že antivirový program na vašem systému je to blokuje. Chcete-li odblokovat, viz níže:


1. Klikněte pravým tlačítkem myši na IP Finder a zvolte "Vlastnosti".

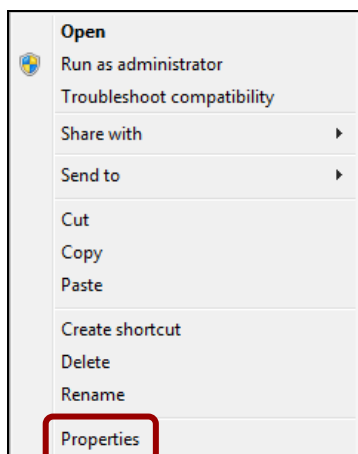

2. Vyhledejte "Bezpečnost" na spodní části. Klikněte na Odblokovat.

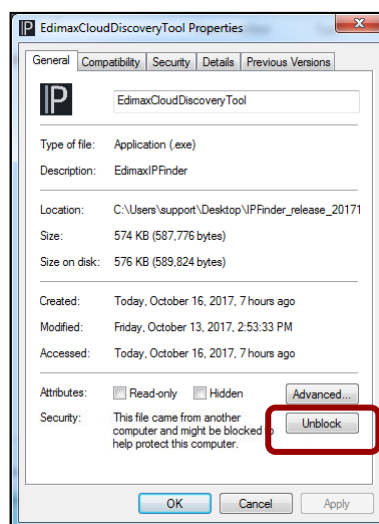

6. Kliknutím na  v IP Finder najdete hlavní přístupový bod.

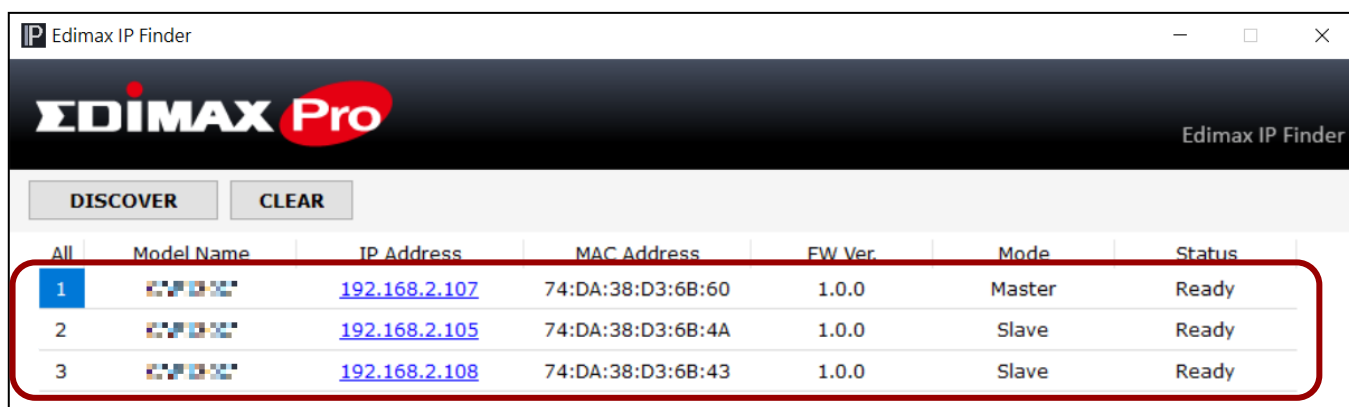

7. Klepnutím na adresu IP hlavního přístupového bodu přejdete do jeho webového uživatelského rozhraní.


All	Model Name	IP Address	MAC Address	FW Ver.	Mode	Status
1	EDIMAX Pro	<a href="#">192.168.2.107</a>	74:DA:38:D3:6B:60	1.0.0	Master	Ready
2	EDIMAX Pro	<a href="#">192.168.2.105</a>	74:DA:38:D3:6B:4A	1.0.0	Slave	Ready
3	EDIMAX Pro	<a href="#">192.168.2.108</a>	74:DA:38:D3:6B:43	1.0.0	Slave	Ready

Po vstupu do webovou stránku, měli byste být vyzváni k zadání uživatelského jména a hesla, zadejte je (Výchozí uživatelské jméno: **admin**, heslo: **1234**), abyste mohli pokračovat:



The login screen features the EDIMAX Pro logo at the top left. In the center, the text "OFFICE 1-2-3" is displayed, with "1-2-3" in a red box. Below this, there are two input fields: "Username" and "Password", each preceded by a small icon (a person for username, a key for password). To the right of these fields is a grey "LOGIN" button.

Webové uživatelské rozhraní je zobrazené níže:

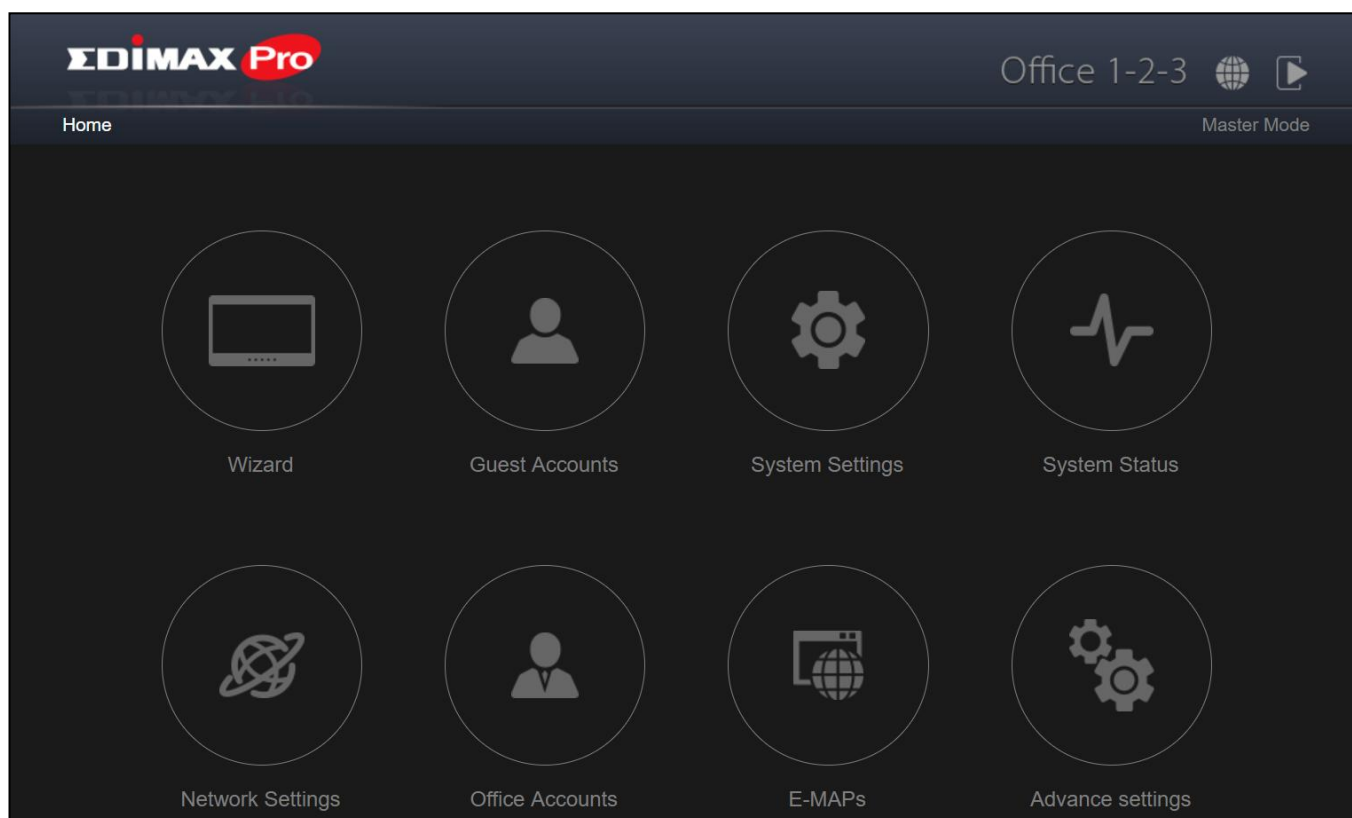


8. Klikněte na "Průvodce nastavením" a přejděte na další sekci, abyste mohli projít průvodce nastavením.

## III-2 Průvodce nastavením


Průvodce vám pomůže s nastavením základních nastavení sítě Office 1-2-3, včetně účtů sítě Kancelář, účtů sítě Host a sítě Zařízení, atd.



**POZNÁMKA:** Ve většině případů jednoduše projďte následující kroky kliknutím na "Další", ačkoli se doporučuje přidat/upravit heslo, klíč Wi-Fi a účty.



1. Klikněte na "Průvodce nastavením" na webové rozhraní pro spuštění průvodce nastavením:

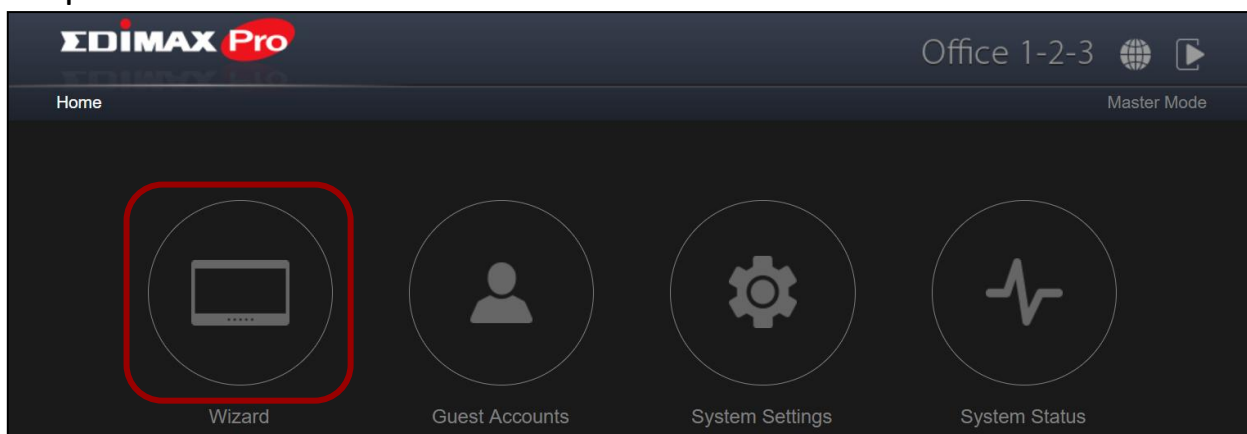

2. Změňte heslo pro účet administrátora a účet recepce.





**POZNÁMKA:** Účet recepce slouží pouze k vytváření účtů hostů a tisku lístků.

Po změně na Hlavním se také změní uživatelské jméno a heslo na Sekundárních.



**POZNÁMKA:** Kliknutím na aktuální režim (níže uvedená oblast) můžete kdykoli změnit mezi hlavním a sekundárním režimem. Nedoporučuje se však s výjimkou obnovení hlavního přístupového bodu.

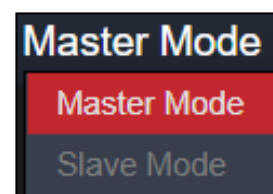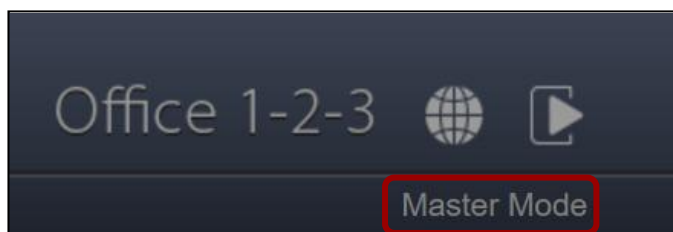

1

Setting Password

Setting Password

Administrator Account

Name

admin

Password

.....

(4-32Characters)

Confirm Password

.....

Confirm

Frontdesk Account

Name

frontdesk

Password

.....

(4-32Characters)

Confirm Password

.....

Confirm

\* This front desk account is for creation of guest account tickets only. It can not make change to other settings.

### 3. Nastavení času: Nastavte čas vašeho přístupového bodu.



**POZNÁMKA:** Doporučujeme zapnout server NTP tak, aby zařízení zůstalo včas i po výpadku napájení. Vyberte server NTP, který se nachází blízko vaší země.

2

Time Settings

Time Settings

Administrator Account

Local Time

2016

▼

Year

Dec

▼

Month

1

▼

Day

0

▼

Hours

00

▼

Minutes

00

▼

Seconds

Acquire Current Time from Your PC

Use NTP

☐

Enable

Auto Daylight Saving

☒

Enable

Server Name

User-Defined

▼

Update Interval

24

(Hours)

Time Zone

(GMT-06:00) Central Time (US & Canada)

▼

#### Nastavení datumu a času

<b>Místní čas</b>	Nastavte datum a čas přístupového bodu ručně pomocí rozbalovacích nabídek.
<b>Získejte aktuální čas z počítače</b>	Kliknutím získáte čas a datum automaticky z počítače.
<b>Použijte NTP</b>	Zaškrtněte pro automatickou synchronizace času a datumu se serverem NTP.

13

<b>Automatická úspora letního času</b>	Zaškrtněte/zrušte zaškrtnutí pro zapnutí/vypnutí funkce letního času.
<b>Název serveru</b>	Pomocí rozbalovací nabídky vyberte oblast. Po výběru oblasti se zobrazí server. Vyberte oblast podle vaší polohy.
<b>Interval aktualizace</b>	Určete, jak často (v hodinách) bude se přístupový bod synchronizovat se serverem NTP.
<b>Časové pásmo</b>	Vyberte časové pásmo vaší země/oblasti. Pokud vaše země/oblast není v seznamu, vyberte jinou země/oblast, jejíž časové pásmo je stejné jako vaše.

## 4. Sít Host: Konfigurace nastavení sítě Host



**POZNÁMKA:** Doporučuje se pouze změnit heslo Wi-Fi připojení, zatímco ostatní ponechat beze změny tak, jak je (výchozí hodnoty) a kliknout na „Další“.

EDIMAX Pro

3 Guest Network

Guest Network

Guest Network

Same settings for both Radios

SSID	guest123
Hide SSID	Disable
Encryption	None
Type	TKIP/AES
WiFi Password	

Bandwidth limit

Bandwidth limit

Disable

Access

Access

Internet Only

Type	IP Address	Subnet Mask
Gateway	192.168.2.250	255.255.255.0

Device Name	IP Address	Subnet Mask	Action
	192.168.2.250	255.255.255.0	Disable
	192.168.2.101	255.255.255.0	Disable
	192.168.2.102	255.255.255.0	Disable

Additional Access IP

Back Next Exit

Pomocí rozbalovací nabídky vyberte, zda chcete "Stejné nastavení pro obě pásma" nebo "Odlišné nastavení pro každé pásmo".

<b>Název sítě</b>	Zadejte název sítě pro síť Host.
<b>Skrýt název sítě</b>	<b>Zapnout:</b> název sítě bude skryt. Aby se připojit klient musí ručně zadat název sítě. <b>Vypnout:</b> název sítě bude viditelný (výchozí)
<b>Šifrování</b>	Vyberte WPA/WPA2-PSK, WPA2-PSK, WPA-PSK nebo Žádné.
<b>Typ</b>	Select “TKIP/AES”, “TKIP” or “AES” encryption type. The “TKIP/AES” is the default encryption type.
<b>Heslo Wi-Fi</b>	Zadejte heslo Wi-Fi.

## Omezení šířky pásma

Tato funkce omezuje agregovanou rychlost celé sítě.

Pokud je tato funkce zapnuta, budou k dispozici pola Downlink a Uplink.

Zadejte hodnotu pro každé pole.

Bandwidth limit

Enable ▼

Downlink
5000 (1 - 10,000) Kbps

Uplink
5000 (1 - 10,000) Kbps

## Přístup Hosta

Access

Internet Only ▼

Type

IP Address

Subnet Mask

Gateway
192.168.2.250
255.255.255.0

Device Name

IP Address

Subnet Mask

Action

0.0.0.0

0.0.0.0

Disable ▼

0.0.0.0

0.0.0.0

Disable ▼

0.0.0.0

0.0.0.0

Disable ▼

0.0.0.0

0.0.0.0

Disable ▼

0.0.0.0

0.0.0.0

Disable ▼

**Přístup:**

<b>Pouze Internet</b>	Hosté mají přístup pouze k Internetu ( <b>výchozí nastavení</b> ).
<b>Plný Přístup</b>	Hosté mají plný přístup do vaší sítě.

<b>Přístup</b>	
<b>Brána</b>	IP adresa routeru a maska podsítě.

Office 1-2-3 automaticky získá adresy brány a DNS z routeru.

<b>Dodatečná přístupová IP adresa</b>	
<b>Dodatečná přístupová IP adresa</b>	Pokud máte zařízení (např. tiskárnu, skener atd.), které jsou v síti a přejete si je zpřístupnit hostům, vyberte možnost <b>Povolit</b> ve sloupci “Akce”. Zadejte <i>Názvy Zařízení, Adresy IP a Masky Podsítě</i> .

## 5. Sít Kancelář: Konfigurace nastavení sítě Kancelář.

EDIMAX Pro

Office Network

Office Network

Office Network

Same settings for both Radios

SSID	office123
Hide SSID	Disable

Pomocí rozbalovací nabídky vyberte, zda chcete "Stejné nastavení pro obě pásma" nebo "Odlišné nastavení pro každé pásmo".

Podrobné informace o nastavení naleznete v předchozí části.



**POZNÁMKA:** Doporučuje se ponechat beze změny tak, jak je (výchozí hodnoty) a kliknout na „Další“.

## 6. Sít Zařízení: Konfigurace nastavení sítě Zařízení.



**POZNÁMKA:** Doporučuje se zadat heslo Wi-Fi a MAC adresy zařízení, které chcete přidat do sítě. Doporučuje se ostatní ponechat beze změny tak, jak je.

EDIMAX Pro

Device Network

Device Network

Device Network

Same settings for both Radios

SSID	device
Hide SSID	Disable
Encryption	WPA/WPA2-PSK
Type	TKIP/AES
WiFi Password	12345678

Bandwidth limit

Bandwidth limit

Disable

MAC Address Controls

MAC Address Controls

Allow List

Device Name	MAC Address	Action
		Add

Import List

Export List



Pomocí rozbalovací nabídky vyberte, zda chcete "Stejné nastavení pro obě pásma" nebo "Odlišné nastavení pro každé pásmo".



**POZNÁMKA:** Nastavení WiFi, jako je Název Sítě, Šifrování, Limit Šířky Pásma, naleznete v předchozích částech.

### Kontrolování MAC adres

Z rozbalovacího menu zvolte „Seznam povolených zařízení“ tak, aby povolit „Seznam povolených zařízení“.

Zadejte Název Zařízení, MAC Adresu a kliknutím na "Přidat" přidejte zařízení do seznamu povolených zařízení.

Device Name	MAC Address	Action
		Add

### Import Seznamu nebo Export Seznamu

Můžete importovat nebo exportovat seznam MAC adres. Seznam je ve formátu CSV, abyste mohli upravovat pomocí vhodného programu, jako je např. Microsoft Excel.

## 7. Účty sítě Host: Konfigurace nastavení účtů sítě Host.

EDIMAX Pro

6 Guest Accounts

Guest Accounts

Guest Accounts

Guest Authentication: Login Account

Account Usage: 5/128

Manage User Account: Setup

Generate Printed Ticket: Setup

Captive Portal: Setup

SMS Service: Setup

Multiple Access per Account: Enable

### Ověřování Hosta

Máte 4 možnosti pro pvěření Hosta:

- **Volný:** Hosté mohou volně přistupovat k síti bez účtu.
- **Service Level Agreement:** Hosté si musí přečíst dementi a kliknout na OK pro přístup k síti.

	<ul style="list-style-type: none"> <li>● <b>Účet s přihlášením (Výchozí):</b> Hosté musí zadat uživatelské jméno a heslo pro přístup.</li> <li>● <b>Účet s přihlášením + SMS:</b> Hosté mohou zadat své telefonní číslo a systém pošle informace o účtu do svého mobilního telefonu prostřednictvím SMS.</li> </ul>
<b>Účty s vícenásobným přístupem</b>	Umožnit, aby povolil použití jedné informace o účtu na více zařízeních.

## Řízení uživatelského účtu

Klikněte na "Nastavení" Manage User Account Setup pro volby v níže:

## Přidat nebo Upravit

Klikněte na „Přidat“ pro přidání nového uživatele, nebo „Upravit“ pro upravení stávajícího uživatele:

<b>Jméno</b>	Zadejte uživatelské jméno.
<b>Popis</b>	Zadejte popis pro možné budoucí reference
<b>Heslo</b>	Zadejte heslo
<b>Potvrďte heslo</b>	Zadejte stejné heslo jako výše
<b>Platný čas</b>	Vyberte platný čas ve dnech nebo hodinách. Nebo můžete zvolit "Vždy", abyste vždy umožnili přístup tohoto účtu k síti.



## Smazat nebo Smazat všechny uživatele s vypršením platnosti


Chcete-li některé uživatele smazat, zkontrolujte uživatelské položky a klikněte na "Smazat". Chcete-li vymazat uživatele s vypršením platnosti, klikněte na "Smazat všechny uživatele s vypršením platnosti".

## Nahrát Seznam nebo Stáhnout Seznam

Můžete nahrát nebo stáhnout seznam uživatelských účtů. Seznam je ve formátu CSV, abyste mohli upravovat pomocí vhodného programu, jako je např. Microsoft Excel.

## Vytvořte lístek, který chcete vytisknout

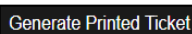Klikněte na "Nastavení"   pro volby v níže:

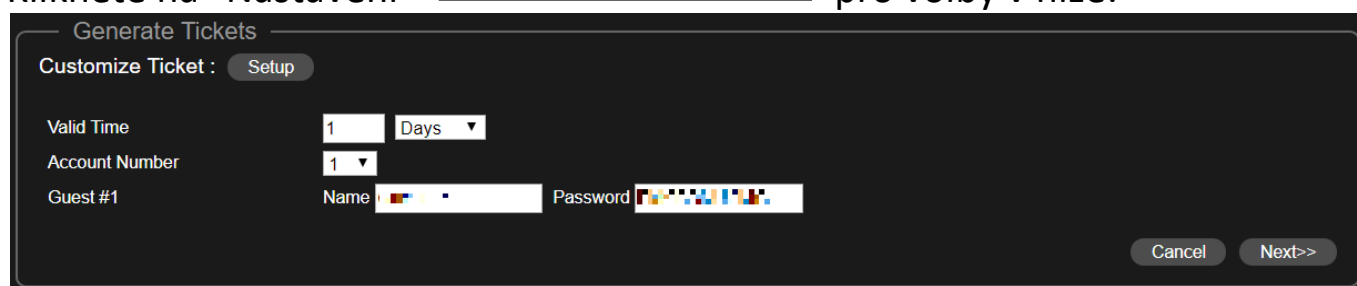

V této části můžete nakonfigurovat informace potřebné pro generování náhodných účtů, které budou vytištěny. Tisk je nejjednodušší způsob, jak vytvořit účet pro vaše hosty na vyžádání.

<b>Platný čas</b>	Vyberte platný čas ve dnech nebo hodinách. Nebo můžete zvolit "Vždy", abyste vždy umožnili přístup tohoto účtu k síti.
<b>Počet účtů</b>	Zvolte číslo z rozbalovací nabídky pro počet účtů hosta, které chcete vygenerovat.
<b>Host #1-10</b>	Záleží na výše uvedeném "Počet účtů", zobrazí se jména a hesla hostů. Dostupná pole můžete upravit.

## Upravte lístky

Klikněte na "Nastavení" vedle položky "Upravte lístky". Tato část umožňuje změnu obsahu tištěného lístku.

Definition Table

Symbol	Description
{SSID}	The SSID for Guest Portal user
{USERNAME}	The Name of Guest Portal user
{PASSWORD}	The Password of Guest Portal user
{EXPIRETIME}	The expire time of user account
{CREATETIME}	The create time of user account
{SN}	The Serial number of user account

\* While printing the user data in Front Desk page, the "Symbol" will be replaced by the value in Users database.

Printout Content

Welcome!  
EDIMAX Technology Co., Ltd

---

Guest Internet Service

---

SSID: {SSID}  
Username: {USERNAME}  
Password: {PASSWORD}  
Expire Time: {EXPIRETIME}

---

Create Time: {CREATETIME}  
S/N: {SN}

---

Thank you very much !

Preview
Confirm
Cancel

V části "Obsah k tisku" zadejte požadované zprávy.

Můžete zobrazit náhled zprávy kliknutím na "Náhled". Objeví se okno s náhledem. Příklad je uveden níže:

Welcome!  
EDIMAX Technology Co., Ltd

---

Guest Internet Service

---

SSID: Guest\_ssid  
Username: Guest\_1  
Password: URSFKWPGMT  
Expire Time: 2012/01/03 21:41:00





---

Create Time: 2012/01/01 21:41:00  
S/N: 16

---

Thank you very much !

Vraťte se do sekce **Vytvořte lístek, který chcete vytisknout** a klikněte na "Další" pro stránku níže:

Printout Content				
Expiration Date	2017/09/28 16:13:44			
Create Time	2017/09/27 16:13:44			
Description				
S/N	User Name	Password	Phone	Action
2				 

Kliknutím na "Tisknout vše" vytisknete všechny dostupné lístky nebo kliknutím na "Zpět" se vrátíte zpět na předchozí stránku a získáte další konfiguraci.

## Captive Portal


Klikněte na "Nastavení" [Generate Printed Ticket](#) [Setup](#) pro volby v níže:

Guest Portal

Login Portal

Edit

Login page preview



Landing Page

Redirect to the original URL

http://

Default Language

Global (English)

Idle Timeout

5 minutes

Login Password Retry Lockout

5 (1-30 times)

Apply

Cancel

<b>Landing Page</b>	Označte "Přesměrování na původní URL" nebo pole http://. Pokud je zaškrtnuto pole http://, zadejte webovou stránku, jako je webová stránka vaší společnosti.
<b>Výchozí jazyk</b>	Vyberte výchozí jazyk.
<b>Časový limit nečinnosti</b>	V rozevírací nabídce vyberte časový limit nečinnosti.
<b>Login</b>	Zadejte číslo (1 až 30), abyste získali počet opakování.

<b>Password Retry Lockout</b>	Zadáte-li nesprávné heslo zadaný počet opakování, bude zablokován.
-----------------------------------	--

## Upravte Přihlašovací Portal

Klikněte na "Upravit" vedle stránky "Přihlašovací Portal" pro stránku níže:

Customize Login Portal

Choose File
No file chosen

Header Image

Size: 800x200 pixels

Choose File
No file chosen

Logo Image

Size: 200x50 pixels

Title Message
Captive Portal Login

Background Color
FFFFFF

☐ Accept by Default

Terms and Conditions of Use


Please read these terms and conditions of use ("Terms and Conditions") carefully before accessing and browsing this web site ("Web Site"). You can use this web site only if you agree to and accept the Terms and Conditions without limitation or reservation. We may at our sole and exclusive discretion, change, alter, modify, add, and/or remove portions of the Terms and Conditions at any time by updating the contents of this page. You are requested to visit this page and check the then effective Terms and Conditions periodically.

Limitation of Use


All materials on this Web Site are protected by copyright laws, and other applicable laws of each country throughout the world and treaty provisions. Except for personal or non-commercial internal use, you are prohibited to use (including, without limitation, copying, modifying, reproducing in whole or in part, uploading, transmitting, distributing, licensing, selling and publishing) any of the materials, without obtaining prior written permission. Each software that is made available from this Web Site ("Software") is

Preview
Confirm
Cancel

<b>Hlavičkový obrázek</b>	Klikněte na „Vybrat soubor“ a vyberte soubor jako hlavičkový obrázek.
<b>Logo</b>	Klikněte na „Vybrat soubor“ a vyberte soubor jako logo.
<b>Název zprávy</b>	Zadejte/upravte Název zprávy.
<b>Barva pozadí</b>	Klikněte na pole, kde bude k dispozici výběr barev. Vyberte požadovanou barvu.



	
<b>Přijmout podle výchozího nastavení</b>	Označit/zrušit pro aktivovaní/deaktivovaní automatické přijetí smluvní podmínky použití.
<b>Podmínky použití</b>	Zadejte/upravte zprávu o podmínkách použití

Můžete zobrazit náhled zprávy kliknutím na "Náhled". Objeví se okno s náhledem. Příklad je uveden níže.

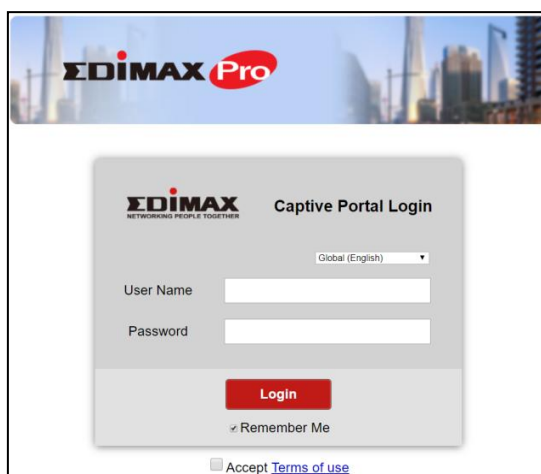

Pokud si nejste jisti obsahu, klikněte na „Potvrdit“ potvrzení přizpůsobení portálu nebo "Zrušit" pro vzdátení změn.

## **SMS Služba**

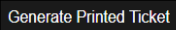Klikněte na "Nastavení"   pro volby v níže:

SMS

Provider
Please Select

Username

Password

SMS Quota Limit
0

Number of SMS Sent
0
Reset

Test Account

Apply
Cancel

Zvolte svého poskytovatele SMS služeb a zadejte potřebné pole pro službu.

## 8. Účty sítě Kancelář: Konfigurace nastavení Účet sítě Kancelář.

Office Accounts

Search  ☐ Match whole words

Account Usage

Multiple Access per Account

<input type="checkbox"/>	Name	Password	Description
<input type="checkbox"/>	office_user	Configured	1

### Přidat nebo Upravit

Klikněte na „Přidat“ pro přidání nového uživatele, nebo „Upravit“ pro upravení stávajícího uživatele:

User Settings

Name

Description

Password

Confirm Password

<b>Jméno</b>	Zadejte uživatelské jméno.
<b>Popis</b>	Zadejte popis pro možné budoucí reference
<b>Heslo</b>	Zadejte heslo
<b>Potvrďte heslo</b>	Zadejte stejné heslo jako výše

Klikněte na "Použít" pro použití nastavení nebo "Zrušit", aby se změny ztratily.

### Smazat


Chcete-li některé uživatele smazat, zkontrolujte uživatelské položky a klikněte na "Smazat".

### Nahrát Seznam nebo Stáhnout Seznam


Můžete nahrát nebo stáhnout seznam uživatelských účtů. Seznam je ve formátu CSV, abyste mohli upravovat pomocí vhodného programu, jako je např. Microsoft Excel.



- 9.** Pro dokončení průvodce klikněte na tlačítko Uložit a ukončit. Před uložením a restartováním se zobrazí zpráva s pokyny:

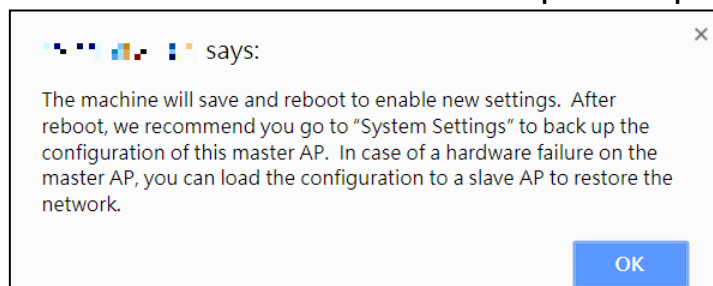

Chcete-li pokračovat, klikněte na "OK" (se zprávou uvedenou níže):

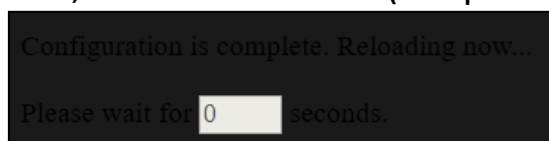

- 10.** Počkejte přibližně 10 minut, než se tato nastavení použijí na sekundární přístupové body.


## IV Office 1-2-3 Rozvinutí

---

Po dokončení průvodce instalací popsaného v části Rychlé nastavení budete muset určit, jak nasadíte přístupové body Office 1-2-3.

### 1. Nainstalujte hlavní přístupový bod v méně přeplněném prostoru.

Tím se sníží zatížení hlavního přístupového bodu. Vzhledem k tomu, že hlavní přístupový bod je síťový řadič, snížení zatížení přinese výhody. Můžete například nainstalovat hlavní přístupový bod do rohu kanceláře, kde se k němu připojuje méně uživatelů.

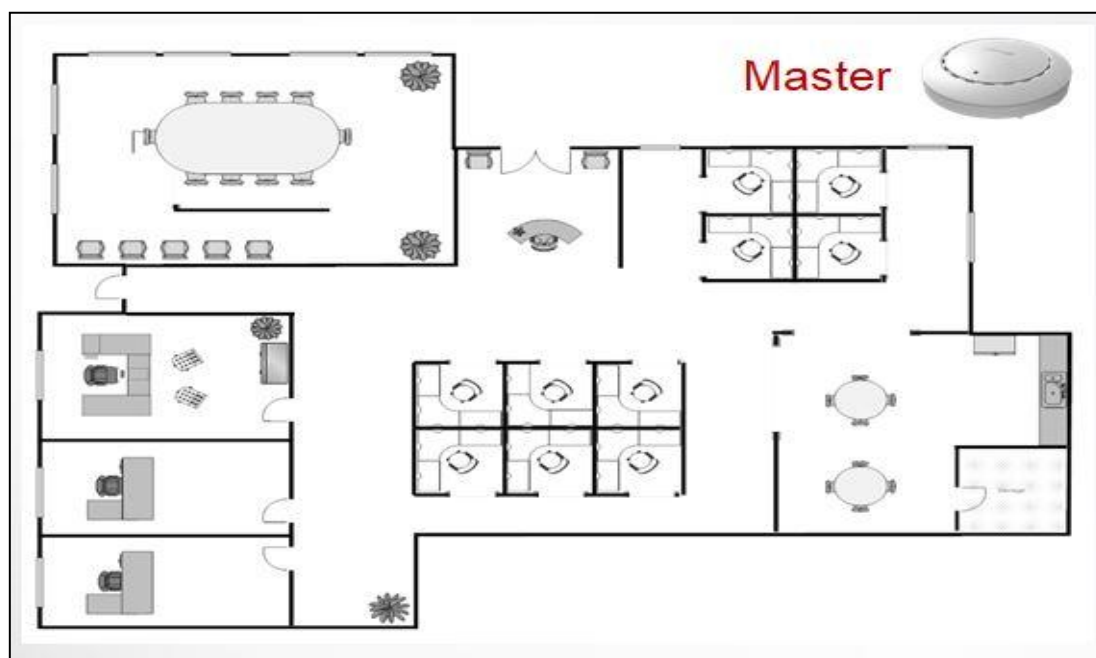

## 2. Nainstalujte sekundární přístupové body ve více přeplněných oblastech.


Vzhledem k tomu, že přístupové body budou rozšiřovat pouze signály Wi-Fi (není potřeba spravovat síť), mohou být instalovány tam, kde jsou připojení vyžadována.

Vzdálenost mezi hlavním přístupovým bodem a sekundárních přístupových bodů se doporučuje být mezi 20-25 metrů.



## 3. Instalování Hlavní / Sekundární přístupového bodu na přepínači POE.

Pomocí kabelu Ethernet připojte přepínač PoE k portu **LAN1** (PoE) hlavního a sekundárního přístupového bodu.

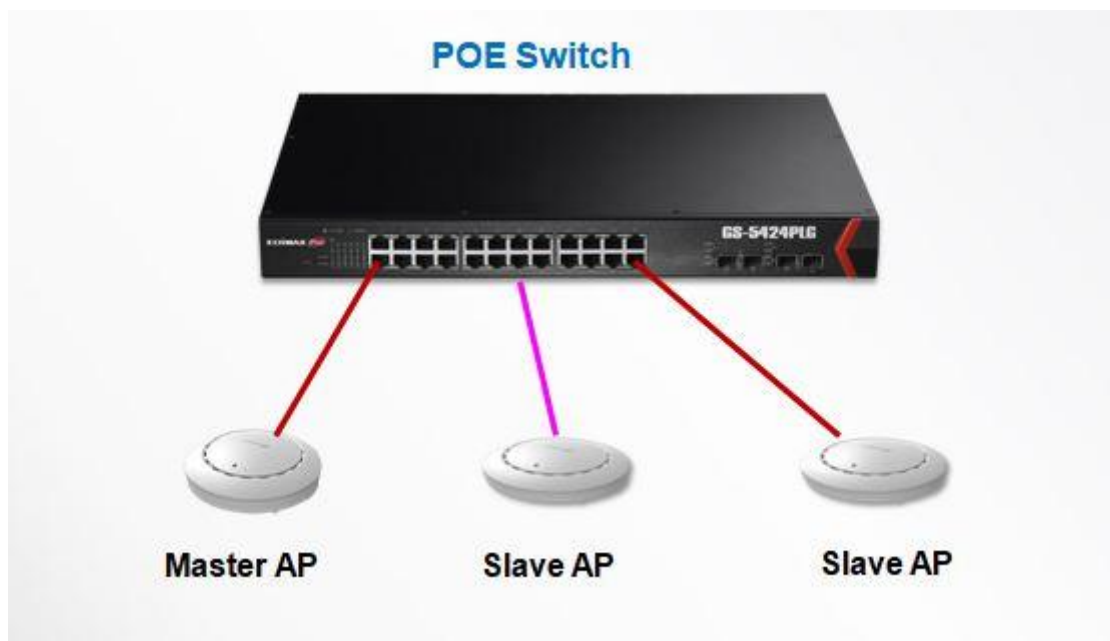

## **COPYRIGHT**

Copyright © Edimax Technology Co., Ltd. all rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission from Edimax Technology Co., Ltd.

Edimax Technology Co., Ltd. makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability, or fitness for any particular purpose. Any software described in this manual is sold or licensed as is. Should the programs prove defective following their purchase, the buyer (and not this company, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software. Edimax Technology Co., Ltd. reserves the right to revise this publication and to make changes from time to time in the contents hereof without the obligation to notify any person of such revision or changes.

The product you have purchased and the setup screen may appear slightly different from those shown in this QIG. The software and specifications are subject to change without notice. Please visit our website [www.edimax.com](http://www.edimax.com) for updates. All brand and product names mentioned in this manual are trademarks and/or registered trademarks of their respective holders.

## **Federal Communication Commission Interference Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio technician for help.

### **FCC Caution**

This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the authority to operate equipment.

### **Federal Communications Commission (FCC) Radiation Exposure Statement**

This equipment complies with FCC radiation exposure set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 2.5cm (1 inch) during normal operation.

### **Federal Communications Commission (FCC) RF Exposure Requirements**

SAR compliance has been established in the laptop computer(s) configurations with PCMCIA slot on the side near the center, as tested in the application for certification, and can be used in laptop computer(s) with substantially similar physical dimensions, construction, and electrical and RF characteristics. Use in other devices such as PDAs or lap pads is not authorized. This transmitter is restricted for use with the specific antenna tested in the application for certification. The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

### **R&TTE Compliance Statement**

This equipment complies with all the requirements of DIRECTIVE 1999/5/EC OF THE EUROPEAN PARLIAMENT AND THE COUNCIL of March 9, 1999 on radio equipment and telecommunication terminal equipment and the mutual recognition of their conformity (R&TTE). The R&TTE Directive repeals and replaces in the directive 98/13/EEC (Telecommunications Terminal Equipment and Satellite Earth Station Equipment) As of April 8, 2000.

### **Safety**

This equipment is designed with the utmost care for the safety of those who install and use it. However, special attention must be paid to the dangers of electric shock and static electricity when working with electrical equipment. All guidelines of this and of the computer manufacture must therefore be allowed at all times to ensure the safe use of the equipment.

**EU Countries Intended for Use**

The ETSI version of this device is intended for home and office use in Austria, Belgium, Bulgaria, Cyprus, Czech, Denmark, Estonia, Finland, France, Germany, Greece, Hungary, Ireland, Italy, Latvia, Lithuania, Luxembourg, Malta, Netherlands, Poland, Portugal, Romania, Slovakia, Slovenia, Spain, Sweden, Turkey, and United Kingdom. The ETSI version of this device is also authorized for use in EFTA member states: Iceland, Liechtenstein, Norway, and Switzerland.

**EU Countries Not Intended for Use**

None

## EU Declaration of Conformity

- English:** This equipment is in compliance with the essential requirements and other relevant provisions of Directive 1995/5/EC, 2009/125/EC, 2006/95/EC, 2011/65/EC.
- Français:** Cet équipement est conforme aux exigences essentielles et autres dispositions de la directive 1995/5/CE, 2009/125/CE, 2006/95/CE, 2011/65/CE.
- Čeština:** Toto zařízení je v souladu se základními požadavky a ostatními příslušnými ustanoveními směrnic 1995/5/ES, 2009/125/ES, 2006/95/ES, 2011/65/ES.
- Polski:** Urządzenie jest zgodne z ogólnymi wymaganiami oraz szczególnymi warunkami określonymi Dyrektywą UE 1995/5/EC, 2009/125/EC, 2006/95/EC, 2011/65/EC..
- Română:** Acest echipament este în conformitate cu cerințele esențiale și alte prevederi relevante ale Directivei 1995/5/CE, 2009/125/CE, 2006/95/CE, 2011/65/CE.
- Русский:** Это оборудование соответствует основным требованиям и положениям Директивы 1995/5/EC, 2009/125/EC, 2006/95/EC, 2011/65/EC.
- Magyar:** Ez a berendezés megfelel az alapvető követelményeknek és más vonatkozó irányelveknek (1995/5/EK, 2009/125/EK, 2006/95/EK, 2011/65/EK).
- Türkçe:** Bu cihaz 1995/5/EC, 2009/125/EC, 2006/95/EC, 2011/65/EC direktifleri zorunlu istekler ve diğer hükümlerle ile uyumludur.
- Українська:** Обладнання відповідає вимогам і умовам директиви 1995/5/EC, 2009/125/EC, 2006/95/EC, 2011/65/EC.
- Slovenčina:** Toto zariadenie spĺňa základné požiadavky a ďalšie príslušné ustanovenia smerníc 1995/5/ES, 2009/125/ES, 2006/95/ES, 2011/65/ES.
- Deutsch:** Dieses Gerät erfüllt die Voraussetzungen gemäß den Richtlinien 1995/5/EC, 2009/125/EC, 2006/95/EC, 2011/65/EC.
- Español:** El presente equipo cumple los requisitos esenciales de la Directiva 1995/5/EC, 2009/125/EC, 2006/95/EC, 2011/65/EC.
- Italiano:** Questo apparecchio è conforme ai requisiti essenziali e alle altre disposizioni applicabili della Direttiva 1995/5/CE, 2009/125/CE, 2006/95/CE, 2011/65/CE.
- Nederlands:** Dit apparaat voldoet aan de essentiële eisen en andere van toepassing zijnde bepalingen van richtlijn 1995/5/EC, 2009/125/EC, 2006/95/EC, 2011/65/EC..
- Português:** Este equipamento cumpre os requisitos essenciais da Directiva 1995/5/EC, 2009/125/EC, 2006/95/EC, 2011/65/EC.
- Norsk:** Dette utstyret er i samsvar med de viktigste kravene og andre relevante regler i Direktiv 1995/5/EC, 2009/125/EC, 2006/95/EC, 2011/65/EC.
- Svenska:** Denna utrustning är i överensstämmelse med de väsentliga kraven och övriga relevanta bestämmelser i direktiv 1995/5/EG, 2009/125/EG, 2006/95/EG, 2011/65/EG.
- Dansk:** Dette udstyr er i overensstemmelse med de væsentligste krav og andre relevante forordninger i direktiv 1995/5/EC, 2009/125/EC, 2006/95/EC, 2011/65/EC.
- suomen kieli:** Tämä laite täyttää direktiivien 1995/5/EY, 2009/125/EY, 2006/95/EY, 2011/65/EY oleelliset vaatimukset ja muut asiaankuuluvat määräykset.

FOR USE IN

AT	BE	CY	CZ	DK	EE	FI	FR
DE	GR	HU	IE	IT	LV	LT	LU
MT	NL	PL	PT	SK	SI	ES	SE
GB	IS	LI	NO	CH	BG	RO	TR



-----

**WEEE Directive & Product Disposal**



At the end of its serviceable life, this product should not be treated as household or general waste. It should be handed over to the applicable collection point for the recycling of electrical and electronic equipment, or returned to the supplier for disposal.



## Declaration of Conformity

We, Edimax Technology Co., Ltd., declare under our sole responsibility, that the equipment described below complies with the requirements of the European Radio Equipment Directive.

**Equipment: AC1300 Ceiling Mount Access Point**  
**Model No.: Office 1-2-3**

The following European standards for essential requirements have been followed:

### Directives 2014/53/EU

Spectrum : N 300 328 V2.1.1 (2016-11);  
EMC : Draft ETSI EN 301 489-1 V2.2.0 (2017-03);  
Draft ETSI EN 301 489-17 V3.2.0 (2017-03);  
EN 301 893 V2.1.1 (2017-05);  
  
EMF : EN 62311:2008

### Directives 2014/35/EU

Safety (LVD) : IEC 60950-1:2005 (2nd Edition);Am 1:2009+Am 2:2013  
EN 60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013

Edimax Technology Co., Ltd.  
No. 278, Xinhua 1st Rd., Neihu Dist.,  
Taipei City, Taiwan



Date of Signature: Sep, 2017

Signature:

A handwritten signature in black ink, appearing to read 'Albert Chang', written over a horizontal line.

Printed Name:

Albert Chang

Title:

Director

Edimax Technology Co., Ltd.

## Notice According to GNU General Public License Version 2

This product includes software that is subject to the GNU General Public License version 2. The program is free software and distributed without any warranty of the author. We offer, valid for at least three years, to give you, for a charge no more than the costs of physically performing source distribution, a complete machine-readable copy of the corresponding source code.

Das Produkt beinhaltet Software, die den Bedingungen der GNU/GPL-Version 2 unterliegt. Das Programm ist eine sog. „Free Software“, der Autor stellt das Programm ohne irgendeine Gewährleistungen zur Verfügung. Wir bieten Ihnen für einen Zeitraum von drei Jahren an, eine vollständige maschinenlesbare Kopie des Quelltextes der Programme zur Verfügung zu stellen – zu nicht höheren Kosten als denen, die durch den physikalischen Kopiervorgang anfallen.

### GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc. 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA  
Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

#### Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

#### TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep

intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
- b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
- c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License.

Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

## **NO WARRANTY**

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES

